



Hybrid Solar Inverter

User Manual

For single phase inverter



Thank you for purchasing our product.
Before using the unit, please read this manual carefully and keep it for future reference.

DECLARATION

The right to modify the frame dimensions, functionality, technical data, parameters, standards without prior notice are reserved.

The contents of this manual have been checked for accordance with its described hardware and software. However, the contents of this manual may be subject to appropriate modification as a result of product upgrade, specification change and update of the manual, we cannot guarantee full accordance all the time. But the data in this manual are reviewed regularly and any necessary corrections are included in subsequent editions. Suggestions for improvement from readers are appreciated.

No part of this manual may be reproduced in any form, or by any means, without prior written permission.

IMPORTANT NOTES

Please assure the intactness of product enclosure and all safety covers before installation. Operation must conform to the requirements of this manual and local industrial safety regulations and/or electrical codes.

In the event of damage or loss of user manual, users may ask local distributors, offices or our Technical Service Department for a new one.

Contents of this manual may be subject to appropriate modification as a result of product upgrade, specification change and update of the manual.

If any item as stated in this manual is not clear, please contact our Technical Service Department.

If any anomaly occurs after power up or during the operation, it is essential to stop the machine and identify the fault or seek technical services as soon as possible.

CONTENTS

1 Safety Precautions	01
1.1 Important Safety Instructions	01
1.2 Important Safety Instructions	05
1.3 CE Directives	06
2 Introduction	07
2.1 Model Description	07
2.2 Basic features	07
2.3 Work Modes	09
2.4 Dimensions	12
2.5 Terminals	12
2.6 Parameters	13
3 Installation	15
3.1 Check for Physical Damage	15
3.2 Packing List	15
3.3 Mounting	16
4 Electrical Connection	19
4.1 Grid connection and EPS Connection	19
4.2 PV connection	21
4.3 Battery Connection	23
4.4 Communication interface definition	24
4.5 WiFi and GPRS Connection (optional)	25
4.6 Inverter Parallel Guide	26
4.7 Generator Use Operation Guide	28
5 Setting	29
5.1 LED Panel	29
5.2 APP SETTING	29
6 Fault Diagnosis and Solutions	45

1 Safety Precautions

Safety signs in this manual:



DANGER indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.



WARNING indicates moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.



CAUTION indicates low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.



NOTE provides valuable tips on the best operation of our products.

1.1 Important Safety Instructions



Danger to life due to a high voltage inside the inverter!

- All work must be performed by a qualified electrician.
- Children and persons with reduced physical sensory abilities, mental capabilities, or lack of experience and knowledge should not use this equipment unless supervised or instructed.



Danger of burns

- When the product is working, the upper of the enclosure and the enclosure body may become hot.
- During operation, only the touch screen needs to be operated.



Radiation may cause damage to health.

- Do not stay at a place less than 20cm away from the inverter for a long time.



Ground the PV generator.

- Comply with the local requirements for grounding the PV modules and the PV generator.
- It is recommended that generator frames and other conductive surfaces be connected in a manner that ensures continuous conduction and grounding for optimum protection of the system and personnel.



Make sure the input DC voltage is less than the maximum value. Over-voltage may cause permanent damage to the inverter or other losses, which will not be covered by the warranty!



Before attempting any maintenance, cleaning or working on any circuits connected to inverter, authorized service personnel must disconnect both AC and DC power from inverter.



Do not operate the inverter while the equipment is running.



Risk of electric shock!

- It is recommended to use only accessories that are compatible with the inverter, otherwise it may lead to the risk of fire, electric shock or personal injury.
- Make sure the existing wiring is in good condition, and the wires are not undersized.
- Do not disassemble any parts of inverter which are not mentioned in installation guide. It contains no user-serviceable parts. See Warranty for service. Unauthorized repairs may result in a risk of electric shock or fire and will void your warranty, and will void the warranty.
- Keep away from flammable, explosive materials to avoid fire disaster.
- The installation location should be away from humid or corrosive substance.
- Authorized service personnel must use insulated tools when installing or working with this equipment.
- PV modules should have IEC 61730 Class A rating.
- Do not touch either the positive or negative pole of PV connecting device. Strictly prohibit touching both of them at the same time.
- The unit contains capacitors that remain charged to a potentially lethal voltage when the MAINS , battery and PV supply has been disconnected.
- Hazardous voltages may remain present for up to 5 minutes after disconnection.
- CAUTION-The energy stored in the capacitor is a shock hazard, do not operate the inverter, coupler, power cable, battery cable, PV cable or PV generator while energized. After turning off the PV, battery and power supply, always wait 5 minutes to allow the intermediate circuit capacitors to discharge before unplugging the DC, battery and power coupler.
- When accessing the internal circuit of inverter, it is very important to wait 5 minutes before operating the power circuit or demounting the electrolyte capacitors inside the device. Do not open the device beforehand since the capacitors require time sufficiently discharge!
- Measure the voltage between terminals UDC+ and UDC- with a multi-meter(impedance at least 1Mohm) to ensure that the device is discharged (<35VDC) before starting to work inside the device.

1.1.1 Install surge protection devices (SPDs) for PV

- Over-voltage protection with surge arresters should be provided when installing PV power generation system.
 - The grid connected inverter does not have SPDs installed on both PV input side and MAINS side.
-
- Lightning will cause a damage either from a direct strike or from surges due to a nearby strike.
 - Induced surges are the most likely cause of lightning damage in majority of installations, especially in rural areas where electricity is usually provided by long overhead lines. Surge may be included on both the PV array conduction and the AC cables leading to the building.
 - Specialists in lightning protection should be consulted during the end use application.
 - Using appropriate external lightning protection, the effect of a direct lightning strike into a building can be mitigated in a controlled way, and the lightning current can be discharged into the ground.
 - Installation of SPDs to protect the inverter against mechanical damage and excessive stress include a surge arrester in case of a building with external lightning protection system (LPS) when separation distance is kept.
 - To protect the DC system, surge suppression device (SPD type2) should be fitted at the inverter end of the DC cabling and at the array located between the inverter and the PV generator, if the voltage protection level (VP) of the surge arresters is greater than 1100V, an additional SPD type 3 required for surge protection for electrical devices.
 - To protect the AC system, surge suppression devices (SPD type2) should be fitted at the main incoming point of AC supply (at the consumer's cutout), located between the inverter and the meter/distribution system; SPD (test impulse D1) for signal in according I to EN 61632-1.
 - All DC cables should be installed to provide as short a run as possible, and positive and negative cables of the string or main DC supply should be bundled together. Avoiding the creation of loops in the system.
 - Spark gap devices are not suitable to be used in DC circuits once conducting, they won't stop conducting until the voltage across their terminals is typically more than 30 volts.

1.1.2 Anti-Islanding Effect

The islanding effect is a special phenomenon where a grid-connected PV system still delivers power to the nearby grid when voltage losses occur in the power system. This can be dangerous for maintenance personnel and the public. The Midea series inverters offer Active Frequency Drift (AFD) to prevent the islanding effect.

1.1.3 PE Connection and Leakage Current

- The end-use application shall monitor the protective conductor by residual current operated protective device (RCD) with rated fault current $I_{fn} \leq 240\text{mA}$ which automatically disconnects the device in case of a fault. The device is intended to connect to a PV generator with a capacitance limit of about 700nF.



High leakage current!

Earth connection essential before connecting supply.

- Incorrect grounding can cause physical injury, death or equipment malfunction and increase electromagnetic.
- Make sure that grounding conductor is adequately sized as required by safety regulations.
- Do not connect the ground terminals of the unit in series in case of a multiple installation. This product can cause current with a DC component, Where a residual current operated protective (RCD) or monitoring (RCM) device is used for protection in case of direct or indirect contact, only an RCD or RCM of type B is allowed on the supply side of this product.

1.1.4 For United Kingdom

- The installation that connects the equipment to the supply terminals shall comply with the requirements of BS 7671.
- Electrical installation of PV system shall comply with requirements of BS 7671 and IEC 60364-7-712.
- No protection settings can be altered.
- User shall ensure that equipment is so installed, designed and operated to maintain at all times compliance with the requirements of ESQCR22(1)(a).
- Make sure that grounding conductor is adequately sized as required by safety regulations.
- Do not connect the ground terminals of the unit in series in case of a multiple installation. This product can cause current with a DC component, Where a residual current operated protective (RCD) or monitoring (RCM) device is used for protection in case of direct or indirect contact, only an RCD or RCM of type B is allowed on the supply side of this product.

1.1.5 For Australia and New Zealand

Electrical installation and maintenance shall be conducted by licensed electrician and shall comply with Australia National Wiring Rules.

1.1.6 Battery Safety Instructions












Midea hybrid Series inverter should be worked with low voltage battery, for the specific parameters such as battery type, nominal voltage and nominal capacity etc., please refer to section 4.

As accumulator batteries may contain potential electric shock and short-circuit current danger, to avoid accidents that might be thus resulted, the following warnings should be observed during battery replacement:

- 1: Do not wear watches, rings or similar metallic items.
- 2: Use insulated tools.
- 3: Put on rubber shoes and gloves.
- 4: Do not place metallic tools and similar metallic parts on the batteries.
- 5: Switch off load connected to the batteries before dismantling battery connection terminals.
- 6: Only personal with proper expertise can carry out the maintenance of accumulator batteries.

1.2 Important Safety Instructions

This section gives an explanation of all the symbols shown on the inverter and on the type label.

Symbol	Explanation
	CE mark. The inverter complies with the requirements of the applicable CE
	TUV
	RCM remark
	SAA certification
	Beware of hot surface. The inverter can become hot during operation. Avoid contact during operation.
	Danger to life due to high voltages in the inverter!
	Danger. Risk of electric shock!
	Please note the provisions of the instruction manual.
	The inverter can't be disposed together with the household waste. Disposal information can be found in the enclosed documentation.
	Do not operate inverter until it is isolated from battery, mains and on-site PV generation suppliers.
	Danger to life due to high voltage. There is residual voltage existing in the inverter after powering off. Which needs 5 min to discharge. Wait 5 min before you open the upper lid or the DC lid.

1.3 CE Directives

This chapter follows the requirements of the European Low Voltage Directive, which contains safety instructions and conditions of acceptance for imported systems that you must follow when installing, operating and servicing the equipment. If ignored, it may result in personal injury or death, or damage to the equipment. Please read this before you perform work on the equipment. If you can not understand these hazards, warnings, cautions, or instructions, contact an authorized service dealer to operate and maintain the equipment prior to installation.

The grid-connected inverter meets the requirements of IEC 62109-1/-2; IEC 62477-1; IEC 61000-6-1/-3.

If installed in a PV system, it is forbidden to start the unit (i.e. to start the specified operation) until it has been established that the entire system complies with the requirements specified in the CE Directive), that the grid-connected inverter is shipped with the connection device completed and ready for connection to the mains and PV power supply, and that the unit is installed in compliance with the national wiring regulations. Compliance with safety regulations depends on proper installation and configuration of the system, including the use of the specified wiring.


The system must be installed only by professional assemblers who are familiar with safety and EMC requirements. It is the responsibility of the assembler to ensure that the final system complies with all relevant laws of the country of use. The individual subassemblies of the system should be interconnected by national/international such as the wiring methods listed in the National Electrical Code (NFPA) Regulation No. 70 or VDE Regulation 0107..

2 Introduction

2.1 Model Description

The model description is as follows (take ME-HS5L as an example):

ME - HS5L



ME: Midea Energy series

HS: Hybrid Single-phase output

5: output power, 5kW

L: battery low voltage

①

②

③


④


2.2 Basic features

Midea Hybrid Series is a high performance inverter that converts solar energy to DC power and stores the energy in batteries.

The inverter can be used to optimize its own energy consumption, to store energy in batteries for future use or to connect to the public grid. The mode of operation depends on the PV energy source and user preferences. It can use the energy from the batteries and the inverter (generated by the PV) to provide emergency power in case of grid outages.

System Diagram 1 (applies to most countries)

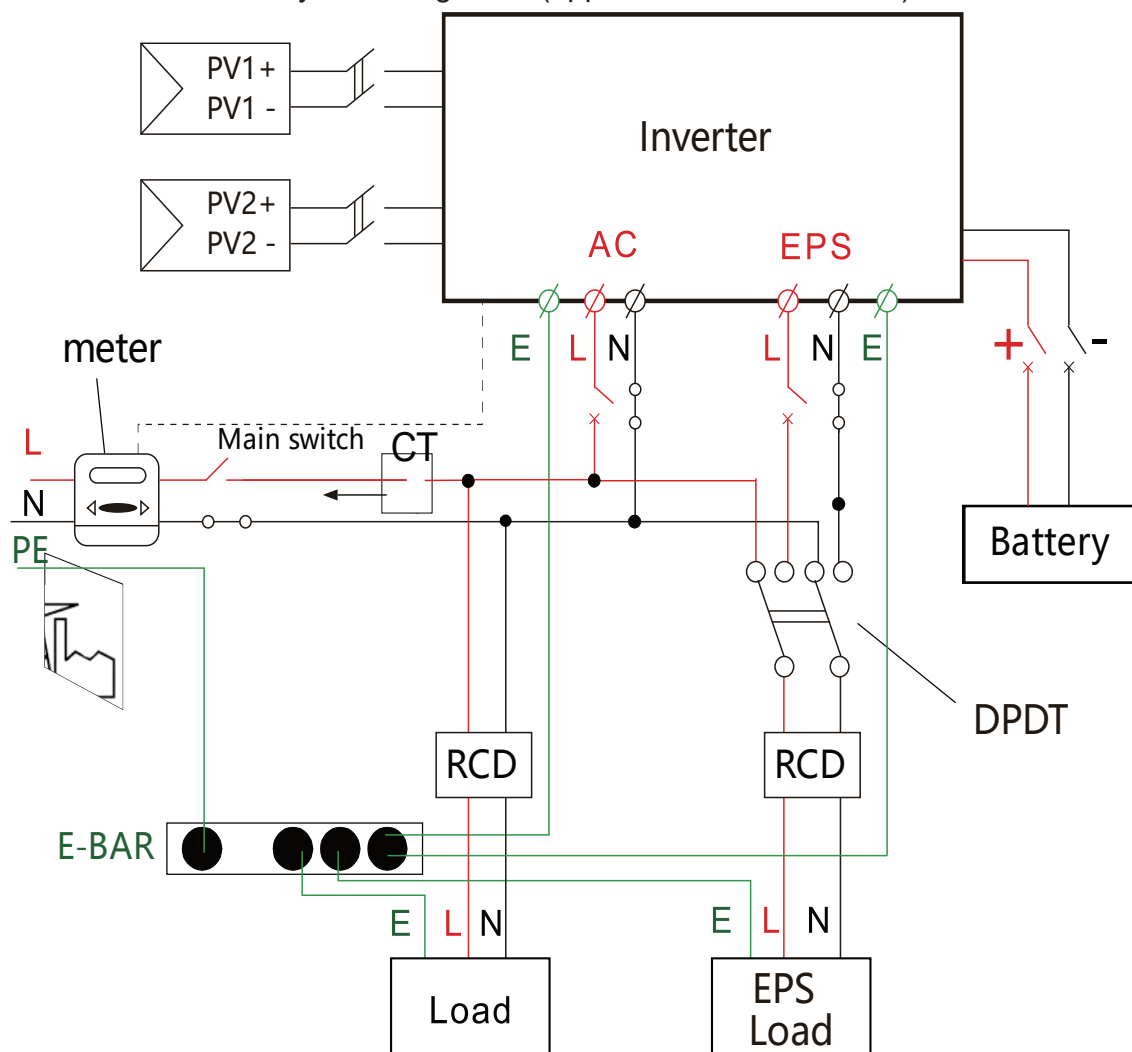

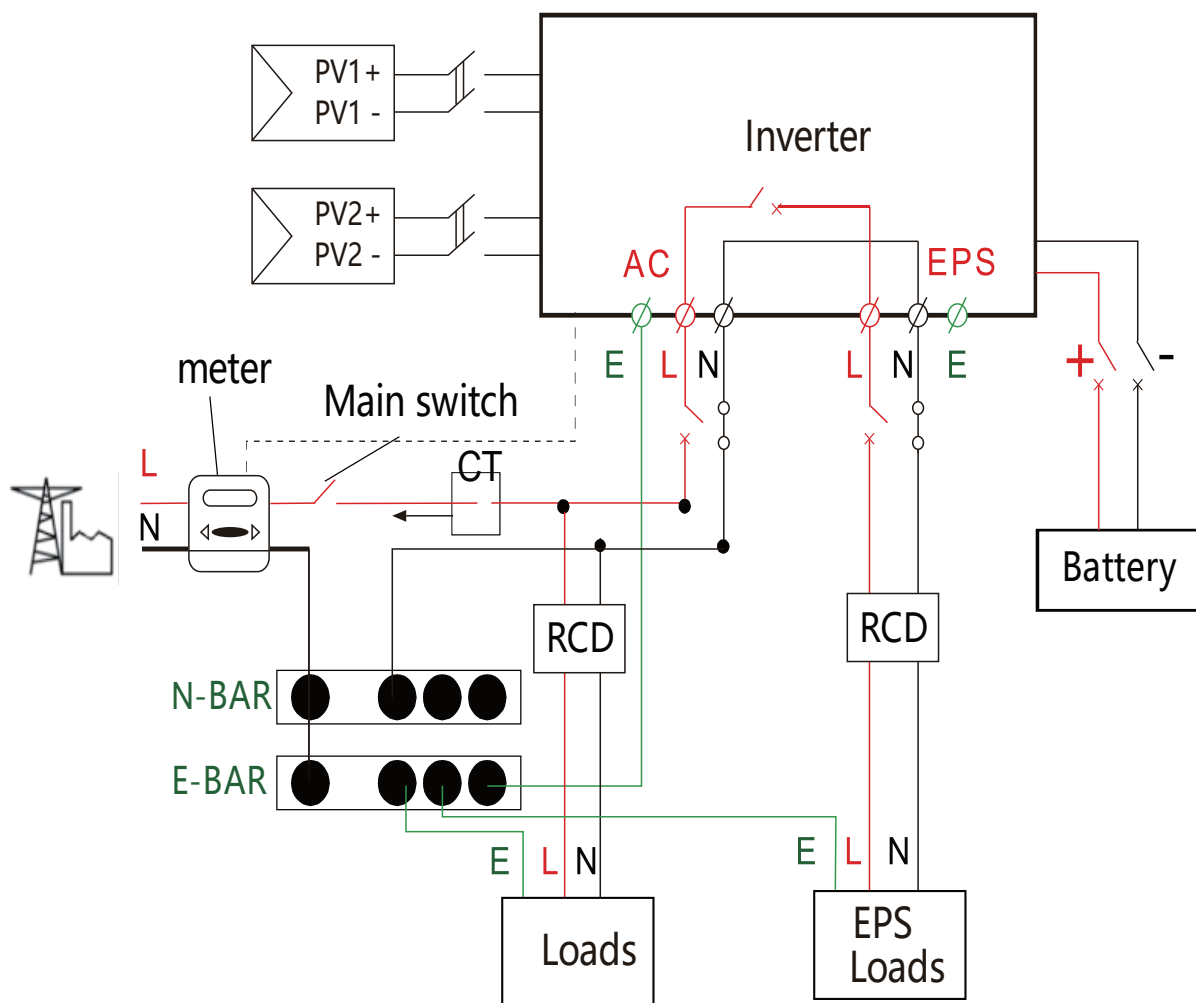


- Please control the household load and make sure it is within the "EPS output rating" in EPS mode, otherwise the inverter will shut down and issue an "overload fault" warning.
- Please check with the main grid operator for any special grid connection regulations.
- The wiring diagram is for reference only and the complete electrical connection should comply with the local regulations.
- Do not misconnect the phase sequence. Otherwise, the inverter will not operate properly.

2.3 Work Modes


The inverter offers multiple working modes according to different requirements.

Work mode: self-use


I. When PV, Grid, Battery is available:

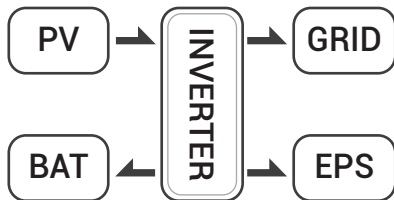

Solar energy provides power to the loads as first priority. If solar energy is sufficient to power all connected loads, solar energy excess power will provide to charge battery, and then redundant power will feed to grid.

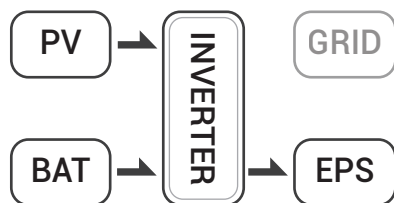


Solar energy provides power to the loads as first priority, if solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time.

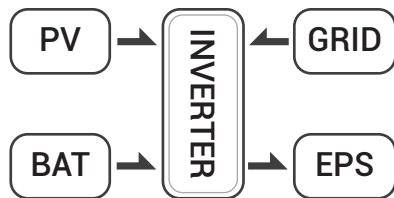


Solar energy provides power to the loads as first priority, if solar energy and battery are not sufficient to power all connected loads, utility energy (Main Grid) will supply power to the loads with solar energy at the same time.

II. When PV, Grid is available(without battery):

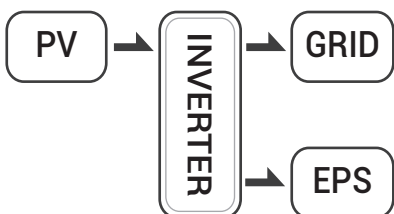


Solar energy provides power to the loads as first priority. If solar energy is sufficient, the excess power will feed to grid.

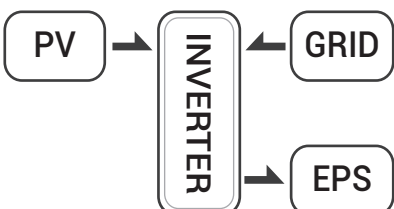


Solar energy provides power to the loads as first priority, if solar energy is not sufficient to power all connected loads, Grid energy will supply power to the loads at the same time.

III. When PV, Battery is available (Grid is disconnected):

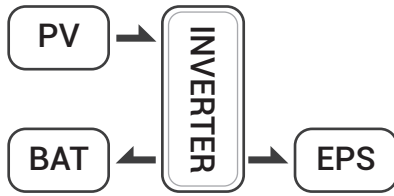


Solar energy provides power to the loads as first priority. if solar energy is sufficient to power all connected loads, solar energy will provides to charge battery.

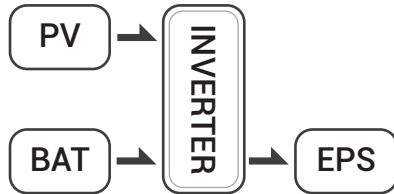


Solar energy provides power to the loads as first priority. if solar energy is not sufficient to power all connected loads, battery energy and solar energy will supply power to the loads at the same time.

Work mode: peak shift


I. When PV, Grid, Battery is available:

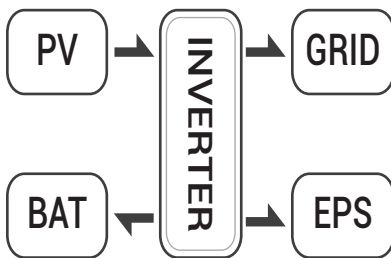


On charge time,solar energy will charge battery as first priority. The excess energy will supply power to the loads.If solar energy is sufficient to supply loads and charge battery.and If there's still some extra energy.then the excess power will feed the power to grid.

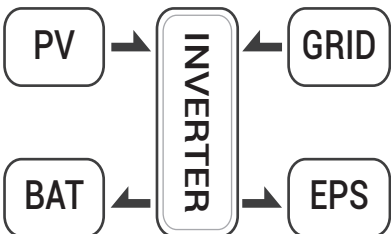

On charge time,solar energy will charge battery as first priority. then the excess solar energy will supply power to loads. If solar energy is not sufficient to charge battery and supply loads,grid will supply all the connected loads with solar energy together.

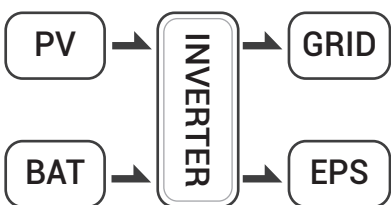


On discharge time,solar energy provides power to the loads as first priority. if solar energy is sufficient to supply loads,and if there's still some extra energy from solar energy,then the excess power and battery will deliver the power to the grid at the same time.

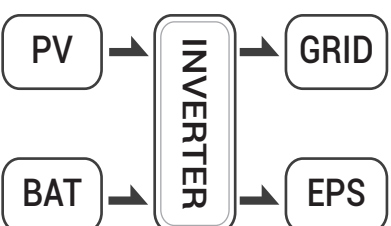


In the period of no charge or discharge,the solar power supply loads at first priority,excess energy to the grid.


II. When Grid.Battery is available(PV is disconnected):

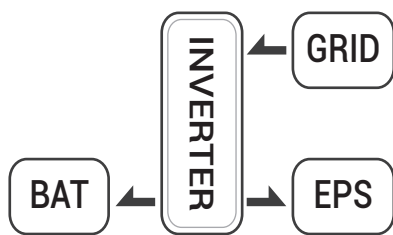

On charge time,grid will charge battery and supply power to the connected loads at the same time.

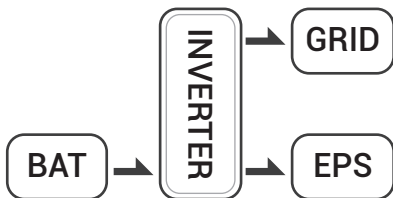


On discharge time,if load power is less than battery power, battery will supply power to loads as first priority.the excess power will be feed to grid.

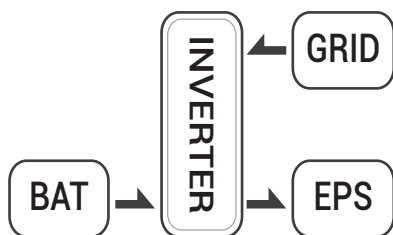


On discharge time,if load power is more than battery power, battery and grid will supply power to the loads at the same time.

Work mode: BAT priority

I. When PV, Grid, Battery is available:

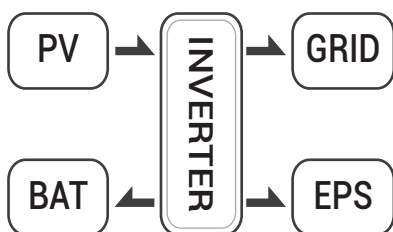


Solar energy will charge battery as first priority, if solar energy is excess. the excess power will supply load. If there's still some extra energy. then the excess power will feed the power to grid.

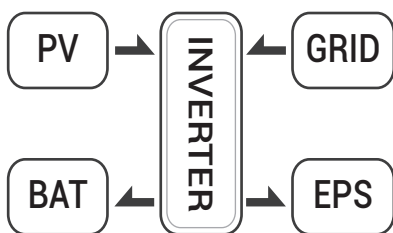

Solar energy will charge battery as first priority, if solar energy is excess the excess power will supply load.If solar energy is not sufficient to charge battery and supply loads, grid will supply power to loads.

II. When Grid, Battery is available(PV is disconnected):

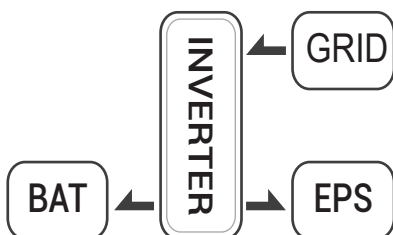


Grid will supply power to load and charge battery at the same time.




• If the anti-reverse function is set to be allowable, the system will not feed power to grid in self-use, peak shift, battery priority modes.

2.4 Dimensions

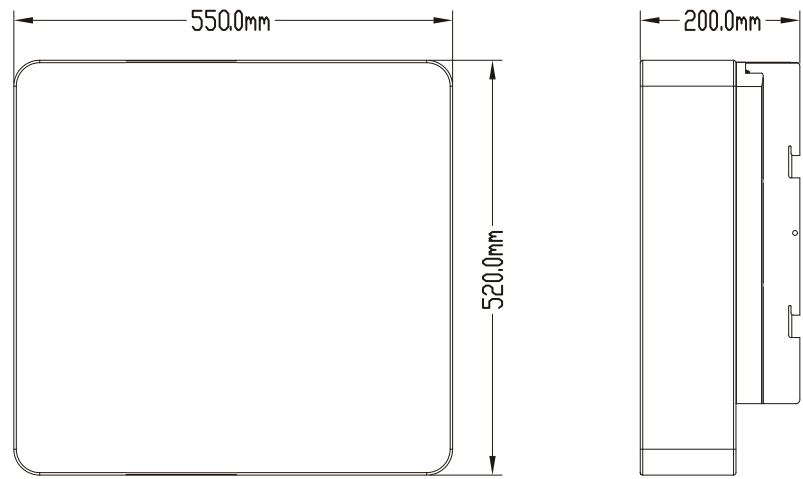

2.5 Terminals

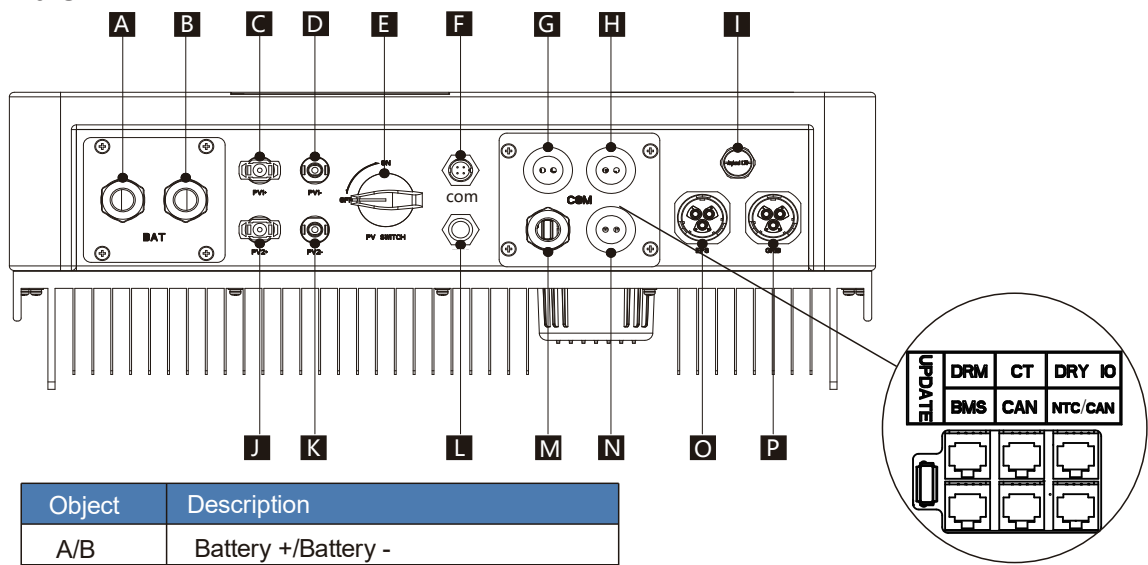

Object	Description
A/B	Battery +/Battery -
C/D	PV1+/PV1-
J/K	PV2+/PV2-
E	DC switch
F	WiFi port for external WiFi
L	Reserved port
G	DRM/BMS
H	Grid current / DRY IO
M	USB port for upgrading
N	POWER CAN /LEAD-NTC
I	Pressure valve
O	EPS output
P	Grid output



1. The Update port: For on-premises upgrades.
2. The BMS port: BMS communication for lithium batteries.
3. The CT port: For external grid side CT to detect current size.
4. The DRM port: Demand response modes,Only used in some countries.
5. CAN port: Parallel port.
6. NTC/CAN port: The reserved port can be used as a parallel port.
7. DRY IO port: Reserved port.

2.6 Parameters

Model	ME-HS3L	ME-HS3R6L	ME-HS4L	ME-HS4R6L	ME-HS5L	ME-HS6L
DC input						
Max. recommended DC power [W]	4600	4600	6000	6000	7000	7000
Max. DC voltage[V]	550	550	550	550	550	550
Nominal DC operating voltage[V]	360	360	360	360	360	360
MPPT voltage range [V]	125-500	125-500	125-500	125-500	125-500	125-500
MPPT voltage range@full load [V]	150-500	150-500	170-500	170-500	220-500	220-500
Max. input current [A]	14/14	14/14	14/14	14/14	14/14	14/14
Max. short circuit current [A]	17.5/17.5	17.5/17.5	17.5/17.5	17.5/17.5	17.5/17.5	17.5/17.5
Start input voltage [V]	125	125	125	125	125	125
No. of MPP trackers	2	2	2	2	2	2
Strings per MPP tracker	1	1	1	1	1	1
Max. inverter back feed current to array	0	0	0	0	0	0
DC disconnection switch	/					
AC output						
Nominal AC power[VA]	3000	3680	4000	4600	5000	6000
Max. apparent AC power[VA]	3000	3680	4000	4600	5000	6000
Rated grid voltage(range)[V]	230 (176 to 270)					
Rated grid frequency[Hz]	50/60					
Nominal AC current[A]	13	16	17.4	20	21.7	26
Max.AC current[A]	13	16	17.4	20	21.7	26
Displacement power factor	0.99 leading...0.99 lagging					
Total harmonic distortion(THDI)	< 2%					
Load control	optional					
AC input						
Nominal AC power[VA]	3000	3680	4000	4600	5000	6000
Rated grid voltage(range)[V]	230(176 to 270)					
Rated grid frequency[Hz]	50/60					
Nominal AC current[A]	13	16	17.4	20	21.7	26
Max.AC current[A]	13	16	17.4	20	21.7	26
Displacement power factor	0.99 leading~0.99 lagging					
AC inrush current	35	35	35	35	35	35
EPS output						
EPS rated power[VA]	3000	3680	4000	4600	5000	6000
Max. EPS power[VA]	3000	3680	4000	4600	5000	6000
EPS rated voltage, Frequency	230VAC, 50/60Hz					
EPS rated current[A]	13	16	17.4	20	21.7	26
Max. EPS current[A]	13	16	17.4	20	21.7	26
Switch time[s]	<20ms					
Total harmonic distortion(THDv)	<2%					
Parallel operation	Yes					
Compatible with the generator	Yes(signal provided only)					
Battery parameter						
Battery type	Lithium battery/Lead-ACID					
Battery voltage range[V]	40-58					
Recommended battery voltage[V]	48					
Cut Off Voltage[V]	40					
Max. charging Voltage[V]	58					
Max. Protective Voltage [V]	59					
Max. charge/discharge current[A]	95/62.5	95/76.6	95/83.3	95/95.8	95/104.2	95/110
Peak charge/discharge current[A]	95/62.5	95/76.6	95/83.3	95/95.8	95/104.2	95/110
Communication interfaces	CAN/RS485/Wifi/LAN/DRM					
Reverse connect protection	Yes					
Efficiency						
MPPT efficiency	99.9%					
Euro efficiency	97%					
Max. efficiency	97.6%					
Max. Battery charge efficiency	95%					
Max. Battery discharge efficiency	95%					

Note: If the South African national grid standard is selected, the grid power is only 4.6kW!

General data

Model	ME-HS3L	ME-HS4L	ME-HS5L
	ME-HS3R6L	ME-HS4R6L	ME-HS6L
Dimension [W/H/D](mm)	550*520*200		
Dimension of packing [W/D/ H](mm)	680*660*330		
Net weight [kg]	25		
Gross weight [kg]	31		
Installation	modularization		
Operating temperature range[°C]	-25~+60 (derating at 45)		
Storage temperature [°C]	-25~+60		
Storage/Operation relative humidity	4%~100% (Condensing)		
Altitude [m]	<2000		
Ingress Protection	IP65(for outdoor use)		
Protective Class	I		
Night-time consumption	<3W		
Over Voltage Category	III (MAINS), II (PV,Battery)		
Pollution Degree	II		
cooling	Natural		
Noise level	<40dB		
Inverter Topology	non-isolated		
Active anti-islanding method	Power variation		
Communication interface	CAN/RS485/Wifi/LAN/DRM		

Safety protection

Safety & Protection	
Over/under voltage protection	YES
DC isolation protection	YES
Monitoring ground fault protection	YES
Grid protection	YES
DC injection monitoring	YES
Back feed current monitoring	YES
Residual current detection	YES
Anti-islanding protection	YES
Over load protection	YES
Over heat protection	YES
Max. output fault current	55A
Max. output over current	28.7A


3 Installation

3.1 Check for Physical Damage

Make sure that the inverter is intact during shipment. If there is any visible damage, such as cracks, please contact your dealer immediately.

3.2 Packing List

Open the package and take out the product, please check the accessories first. The package list is shown below.

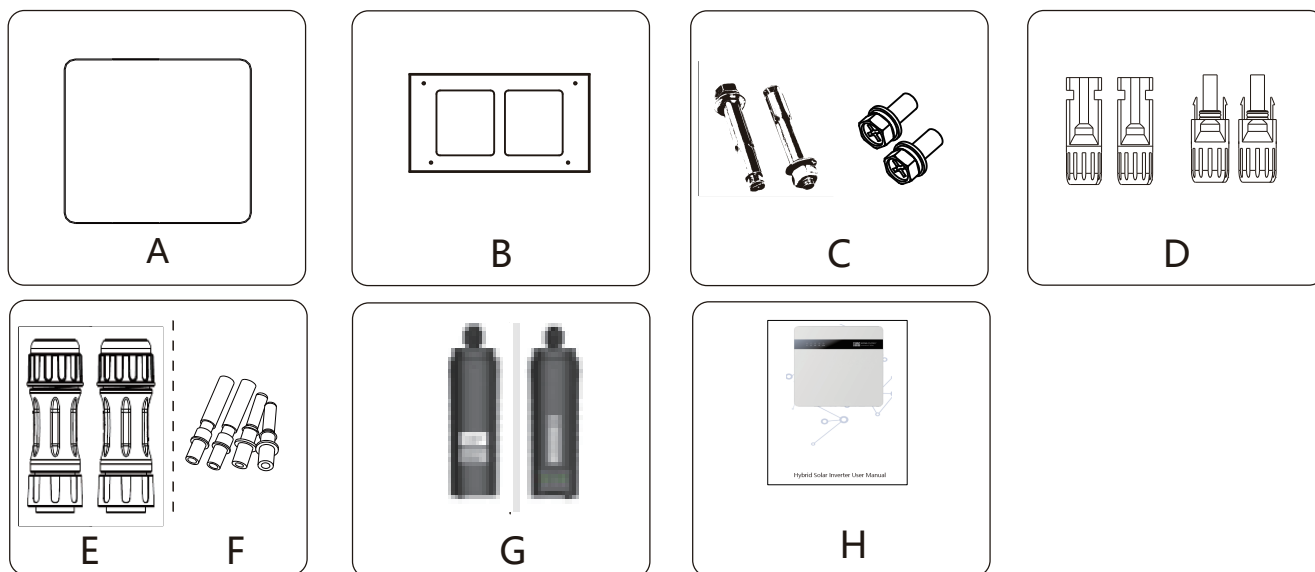

Object	Description
A	Inverter
B	Bracket
C	Expansion screws and pan-head screws
D	PV connectors (2*positive, 2*negative)
E	AC terminals
F	PV pin connectors (2*positive, 2*negative)
G	Wifi module
H	User manual


3.3 Mounting

3.3.1 Installation Precaution


Midea Series inverter is designed for outdoor installation (IP 65). Please ensure that the installation location meets the following conditions:

- Not in direct sunlight.
- Not in areas where highly flammable materials are stored.
- Not in potential explosive areas.
- Not in the cool air directly.
- Not near the television antennas or antenna cables.
- Not higher than altitude of about 2000m above sea level.
- Not in environment of precipitation or humidity (>95%).
- Under good ventilation conditions.
- The ambient temperature is between -20°C and $+60^{\circ}\text{C}$.
- The slope of the wall should be within $\pm 5^{\circ}$.
- The wall hanging the inverter should meet the following conditions:
 - I. Solid brick/concrete, or a mounting surface of comparable strength;
 - II. Inverter must be supported or reinforced if the wall's strength isn't enough (such as wooden wall, the wall covered by a thick decorative layer)


Please AVOIDE direct sunlight, rain exposure, snow accumulation during installation and operation.

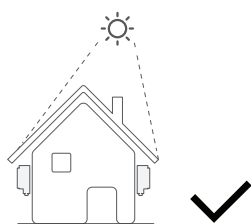


No direct sunlight

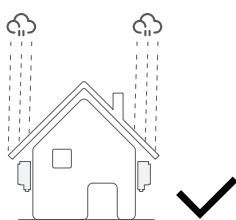


No rain exposure

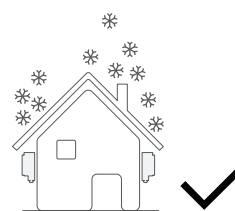


No snow accumulation

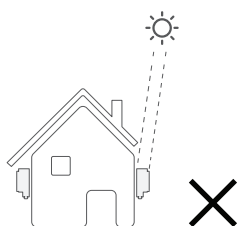

Direct sunlight

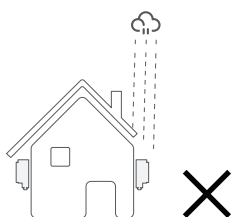


Rain exposure

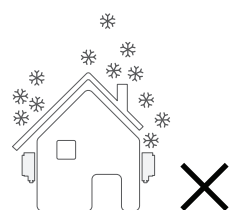

Snow accumulation

3.3.2 Space Requirement

- Space Requirement

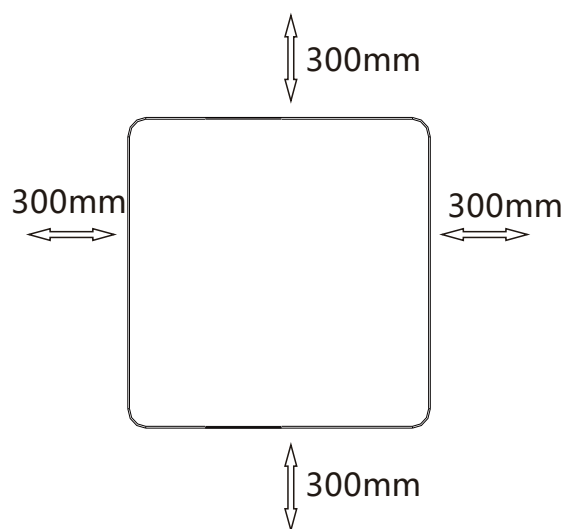

Position	Min.size
Left	300mm
Right	300mm
Top	300mm
Bottom	300mm
Front	300mm

3.3.3 Installation Procedure



Tools:

Terminal blocks, RJ45 crimping pliers, screwdrivers, hand wrenches and drills, etc.




Step 1: Mounting the wall bracket on the wall


1. Place the bracket on the wall, mark the location of the four holes and then remove it.
2. Drill holes with an drill, making sure they are deep enough (at least 60 mm) to support the inverter.
3. Install the expansion tubes in the holes, and tighten them. Then install the wall bracket with the expansion screws.

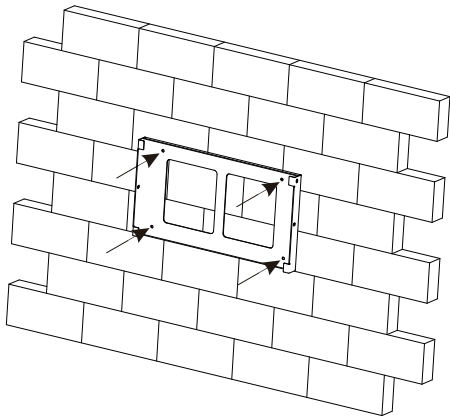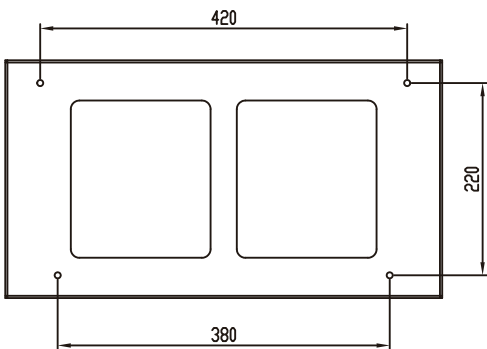


Step 2: Place the inverter on the wall-mounted bracket by holding the handle on the side.

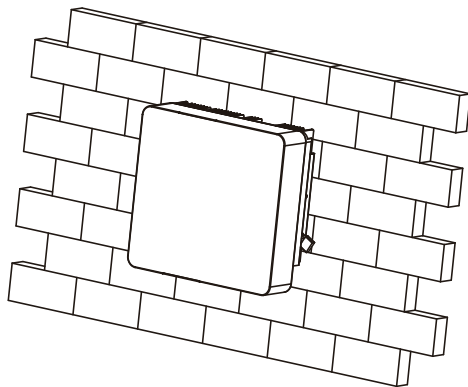

Step 3: Tighten the fixing screws on both sides of the inverter.

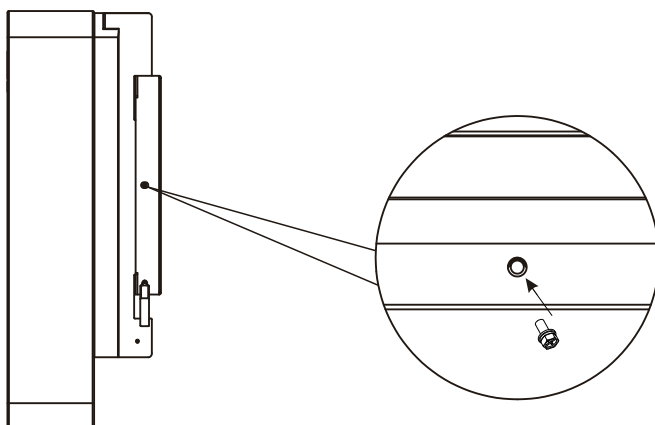


Step 4: If necessary, an anti-theft lock can be installed on the lower left side of the inverter.

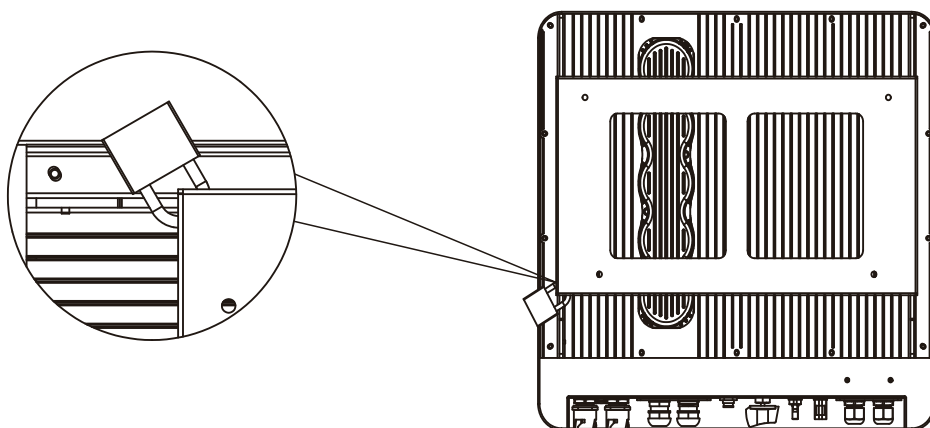

4 Electrical Connection

Electrical connection diagram

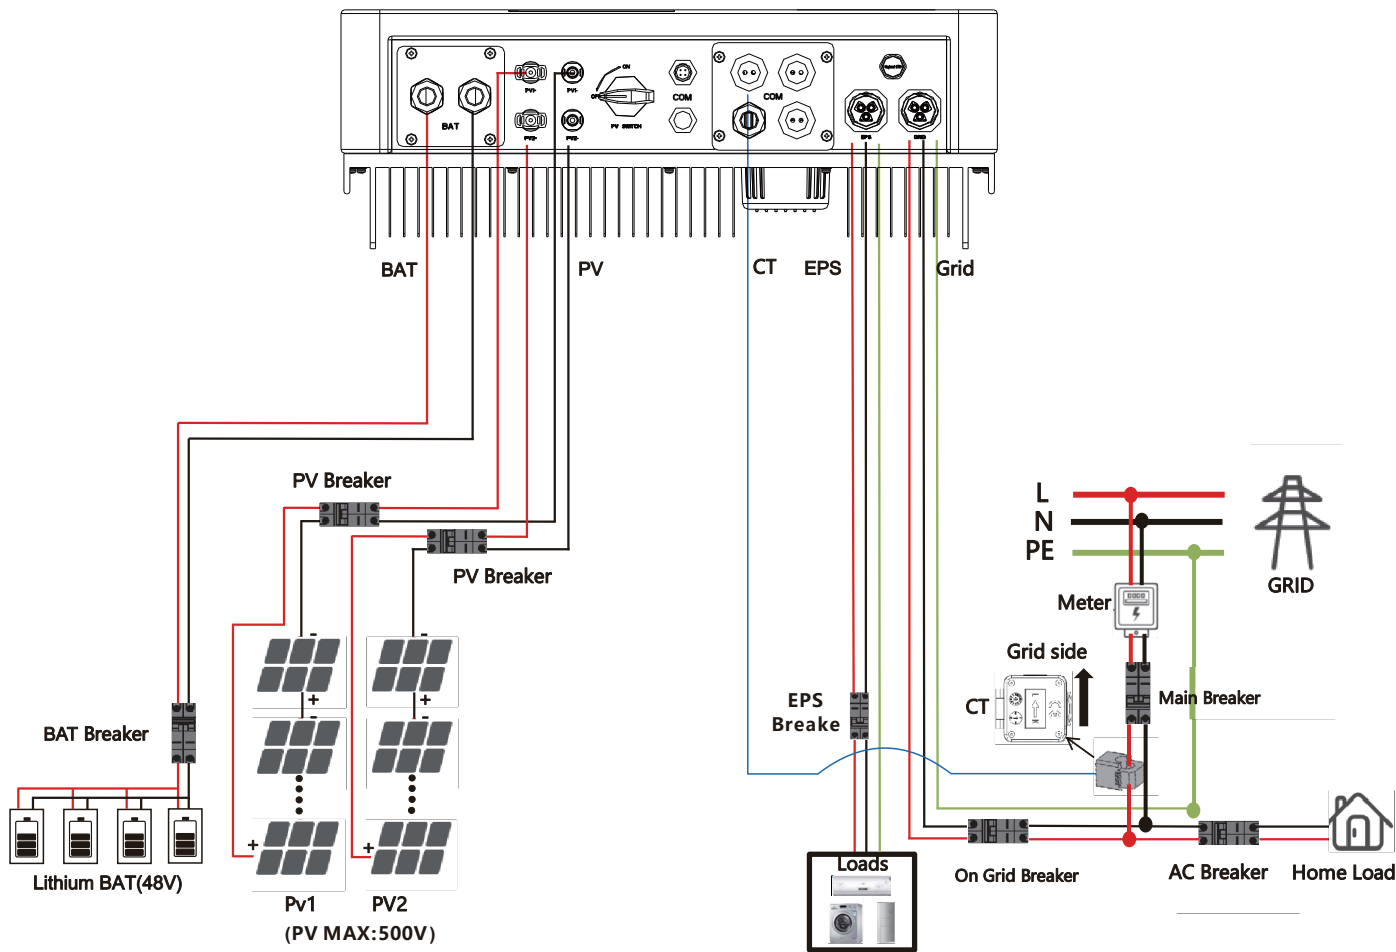

4.1 Grid connection and EPS connection

Hybrid inverter are designed for single phase grid. Voltage is 220/230/240V, frequency is 50/60Hz. Other technical requests should comply with the requirement of the local public grid.

Cable and Micro-breaker recommended


Model	ME-HS3L	ME-HS3R6L	ME-HS4L	ME-HS4R6L	ME-HS5L	ME-HS6L
Cable	4mm ²			6mm ²		
Micro-breaker	20A			32A		

Micro-breaker should be installed between inverter and grid, any load should not be connected with inverter directly.

Step 1: Check the grid voltage.


1. Check the grid voltage and compare with the permissive voltage range (Please refer to technical data).
2. Disconnect the circuit board from all the phases and secure against re-connection.

Step 2: Remove the waterproof lid from the grid port on the inverter.

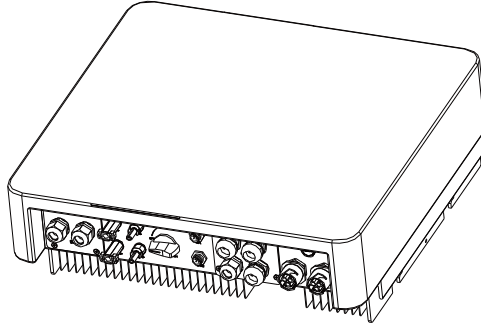

Step 3: Make AC and EPS wires.


1. Choose the appropriate wire (Cable size: refer to Cable Table).
2. Reserve about 60mm of conductor material sectional area and remove 10mm of insulation from the end of wire.
3. Separate the docking screw cap of the AC terminal from the housing portion and insert stripped wires into AC terminal and tighten the screws with a hexagonal wrench.
4. Tighten the docking screw cap and housing portion of the AC terminal.

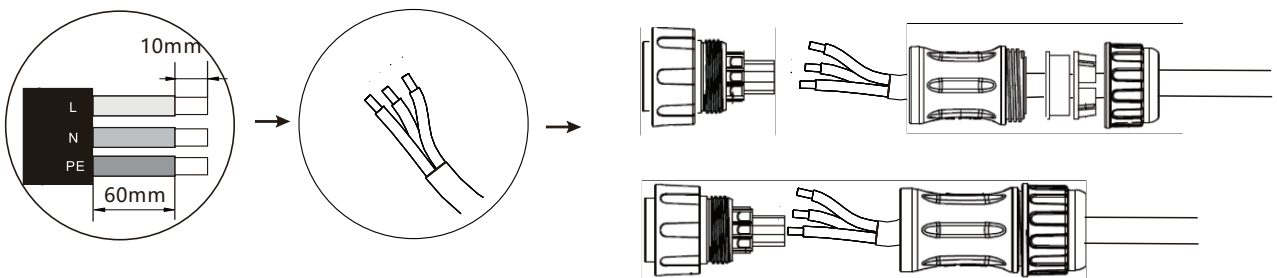

Step 4: Connect the AC connector to the GRID port of the inverter and tighten the screw cap .

Connect the LOAD connector to the EPS port of the inverter and tighten the screw cap .

Note: Connect the AC connector to the GRID into grid interface.

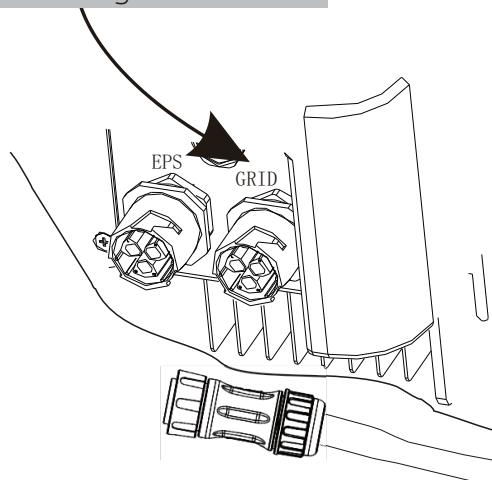

After connecting the gridlines, connect the CT to the L lines, pointing towards the grid side.

4.2 PV connection

Hybrid Inverter can be connected in series with 2-strings PV modules for 3KW,3.6KW,4KW, 4.6KW,5KW and 6KW.

Select PV modules with excellent function and reliable quality. Open-circuit voltage of module arrays connected in series should be less than Max. DC input voltage. Operating voltage should be in accordance with MPPT voltage range.

Max.DC Voltage Limitation

Model	ME-HS3L	ME-HS3R6L	ME-HS4L	ME-HS4R6L	ME-HS5L	ME-HS6L
Max. DC Voltage (V)	550					
MPPT Voltage Range(V)	125-500					




- PV module voltage is very high, which already achieve dangerous voltage range, please comply with electric safety rules when connecting.
- DO NOT ground the PV positive and negative terminals.



- The following requirements of PV modules need to be applied for each input area.
- DO NOT ground the PV positive and (or) negative terminals.
- To save cables and reduce DC losses, it is recommended to install inverters near the PV modules.



- The following PV connection mode is NOT allowed!

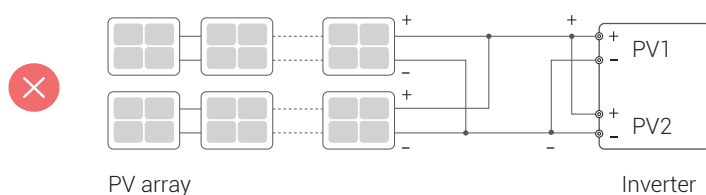


Connection steps:

Step 1 : Inspect PV modules


1. Measure the module array voltage with a voltmeter.
2. Check the PV+ and PV- from the PV string combiner box correctly.
3. Please make sure the impedance between the positive pole and negative pole of PV to ground should be MΩ level.

Step 2: Separate DC Connector.

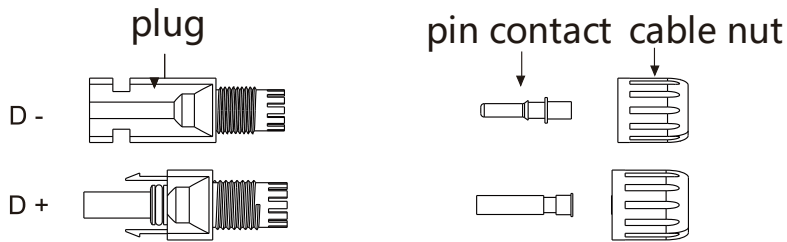


Step 3 : Wiring


1. Connect the 4mm² wire to the cold crimp terminal.
2. Remove 10mm of insulation from the end of the wire.
3. Insert the insulator into the pin contact and clamp it with crimping pliers.

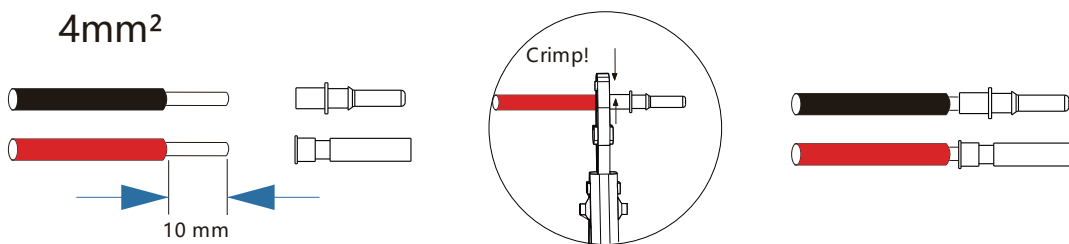

Step 4 : Insert the pin contact through the nut and into the male or female plug, when a "click" is felt or heard, the pin contact assembly is properly seated. Then tighten the nut.

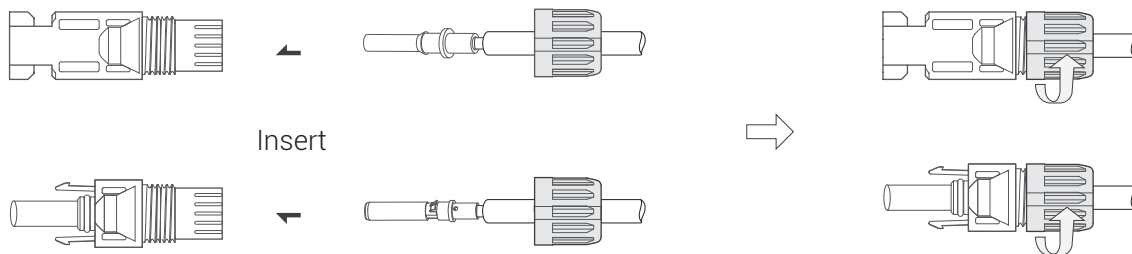

Step 5 : Plug the PV connector into the corresponding interface on the inverter.

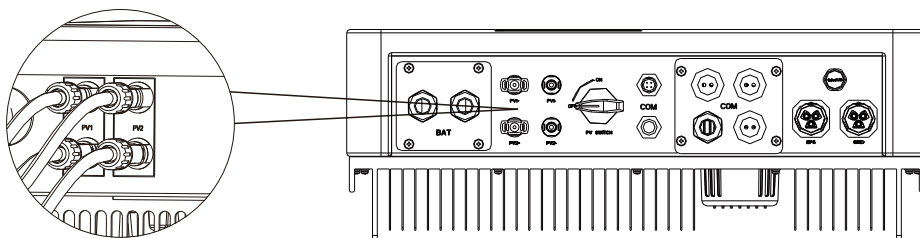

4.3 Battery Connection

- Before choosing battery, please note the maximum voltage of battery can not exceed 59V and the rated voltage of battery can not exceed 48V, and the battery communication should be compatible with Hybrid inverter.
- Before connecting to battery, please install a nonpolarized DC(125A) breaker to make sure inverter can be securely disconnected during maintenance.
- The connecting cable between the battery and the inverter shall be at least 25mm².
- The battery communication can only work when the battery BMS is compatible with the inverter.
- To replace the battery, you need to turn off all switches and unplug the system communication line.
- All the above wiring and operations must be carried out after the whole machine is powered down, and all of them need professional personnel to complete.

Connection steps:

Step 1 : Choose the 25mm² wire and strip the cable to 15mm.

Step 2 : Select two O-terminals with an aperture of M6.


Step 3 : Insert the stripping line into the O-terminal and clamp it with a crimping clamp.




Step 4 : Remove waterproof cover plate.

Step 5 : Disassemble the waterproof connector and pass the cable through the waterproof connector.

Step4.

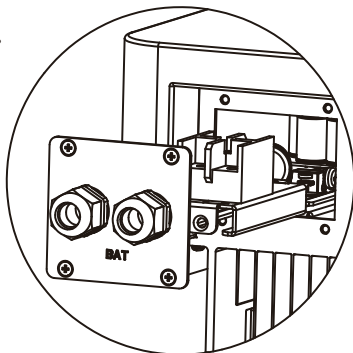


Step5.

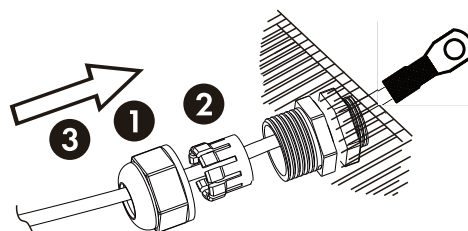

Step 6 : Connect the cable to the terminal of the inverter.

Step 7 : Assemble waterproof connectors and waterproof covers plate.

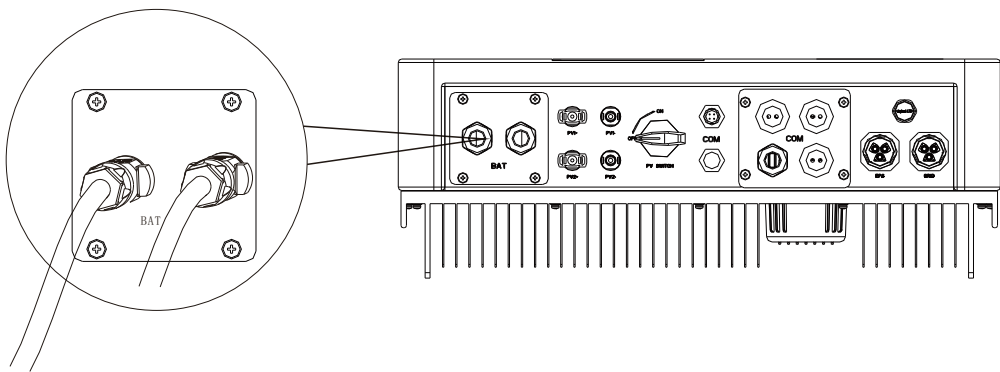


- Positive and negative lines are not allowed to reverse.
- The positive pole on the left and the negative pole on the right.

4.4 Communication interface definition

BMS PIN Definition


Communication interface between inverter and battery is RS485 or CAN with a RJ45 connector. The wiring sequence of the crystal head conforms to the 568B standard: orange white, orange, green white, blue, blue white, green, brown white and brown.



	PIN	1	2	3	4	5	6	7	8
CAN	Definition	X	X	X	BMS_CANH	BMS_CANL	X	X	X
Rs485	Definition	X	X	X	X	X	GND	BMS_485A	BMS_485B

DRY_IO (RJ45 PIN) Definition


Reserved dry contact interface of the inverter.



1	2	3	4	5	6	7	8
COM1	NO 1	NC 1	DI 1	DI 2	COM2	NO 2	NC 2

DRM Connection

DRM is provided to support several demand response modes by emitting control signals as below.
Note: Only PIN6(DRM0) is available now, and other PIN functions are being developed.



1	2	3	4	5	6	7	8
DRM1/5	DRM2/6	DRM3/7	DRM4/8	+5V	DRM0	GND	GND


4.5 WiFi And GPRS Connection(optional)

Inverter provides a WiFi port which can collect data from inverter and transmit it to monitoring-website by WiFi.

Step 1 : Plug WIFI into “COM” port at the bottom of the inverter.


Step 2 : Build the connection between the inverter and router.

Step 3 : Create a user account online.(Please check the WiFi user manual for more details).

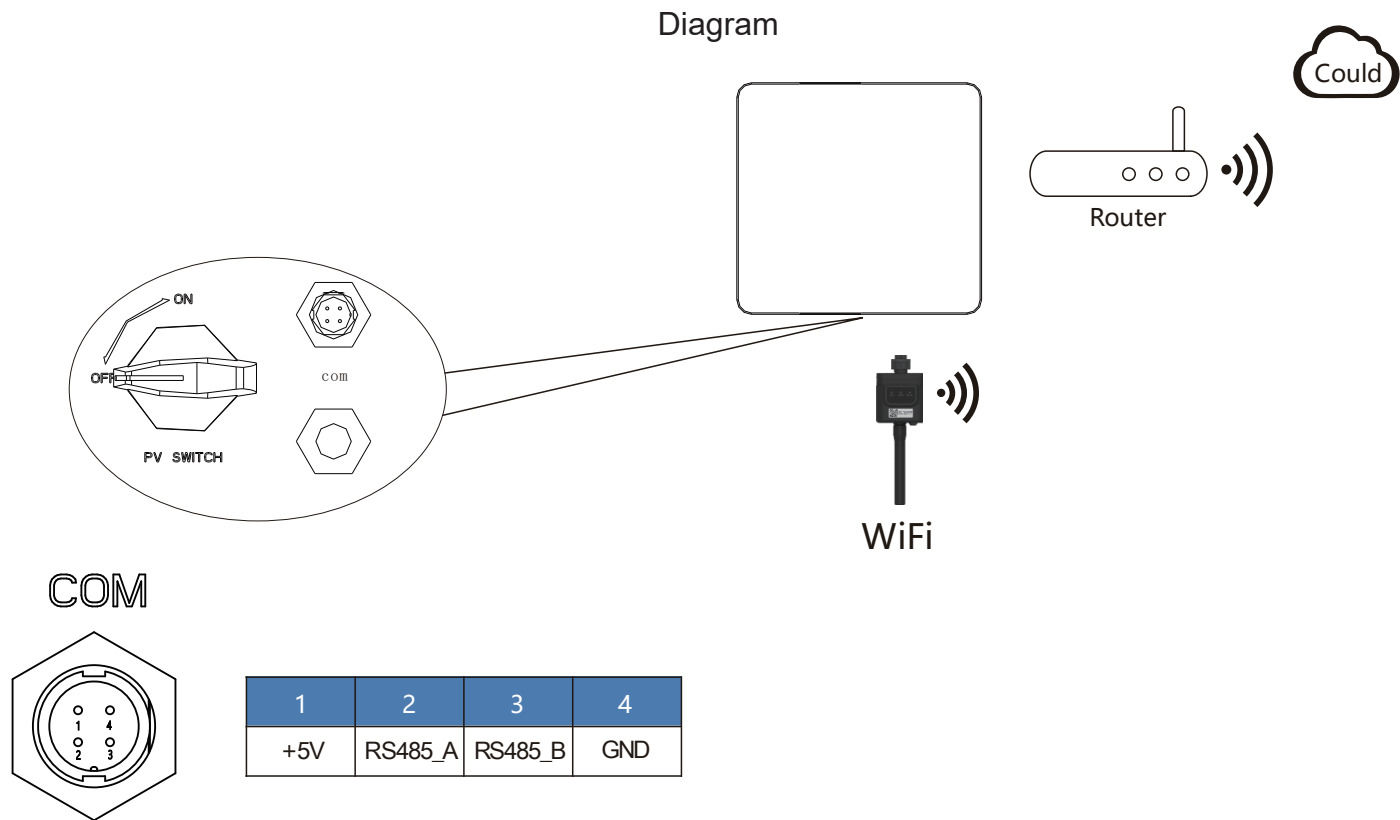


GPRS Connection:

GPRS connection interface is consistent with WIFI interface,Please refer to the GPRS user manual for detailed connection steps.

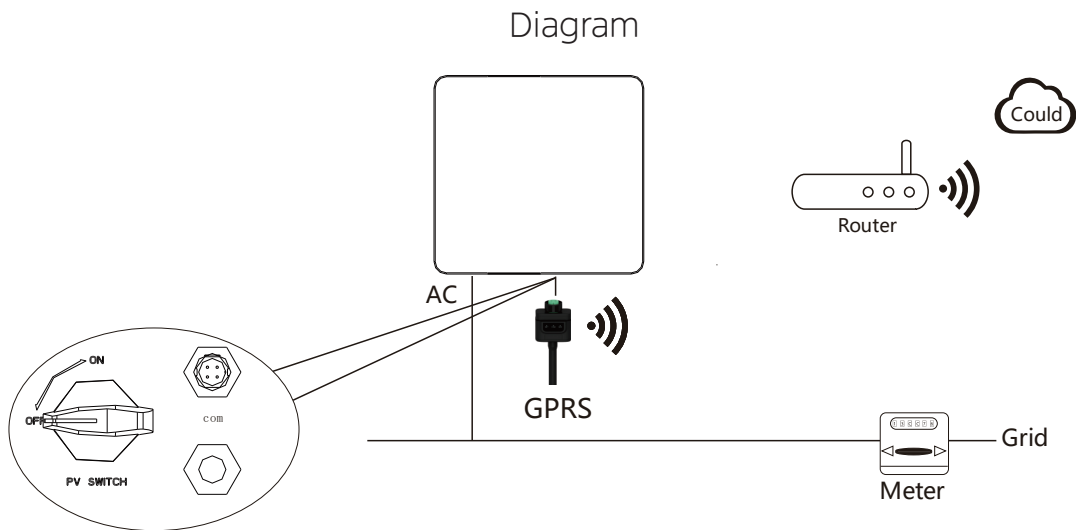

Parallel System Diagram 2 (commo CT connection method).

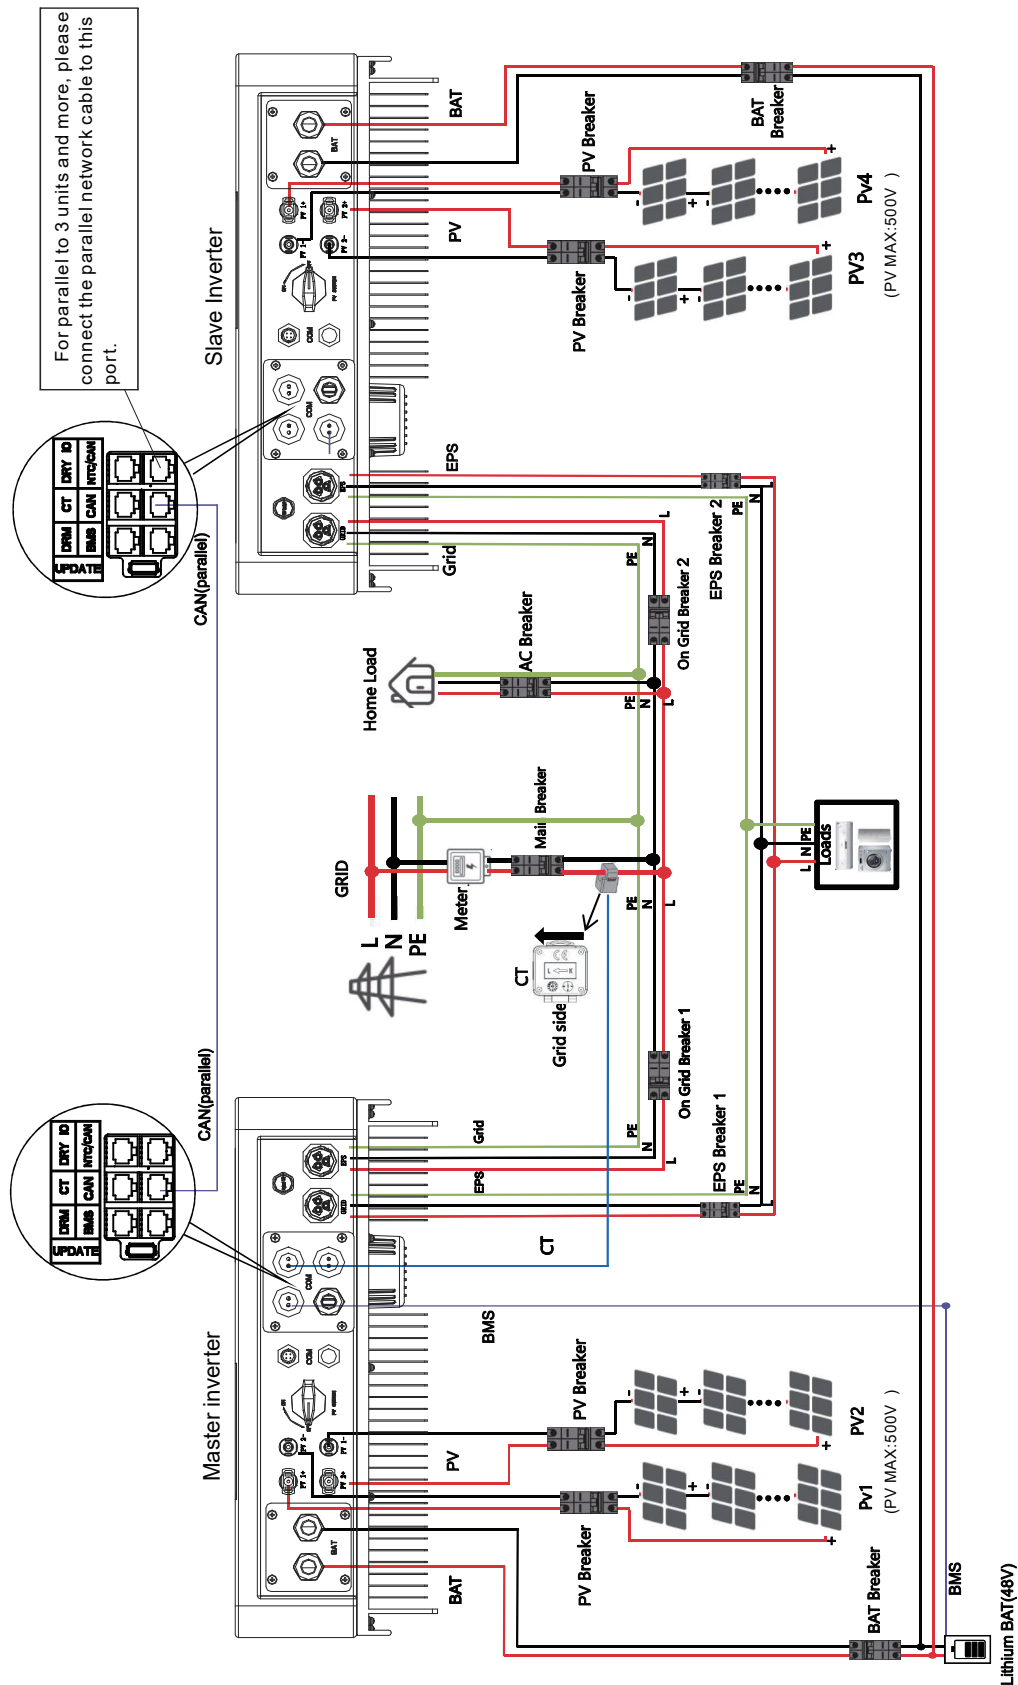

If using Common CT connection Method. Please contact your dealer to purchase a larger capacity CT to ensure sampling accuracy.




1. The Update port: For on-premises upgrades.
2. The BMS port: BMS communication for lithium batteries.
3. The CT port: For external grid side CT to detect current size.
4. CAN port: Parallel port.
5. NTC/CAN port: The reserved port can be used as a parallel port.

4.7 Generator Use Operation Guide

4.7.1 Generator Use Diagram


The Generator is connected to the grid port of the inverter. The connecting cable shall be covered with CT. It is used in some off grid situations. The system diagram is as follows.

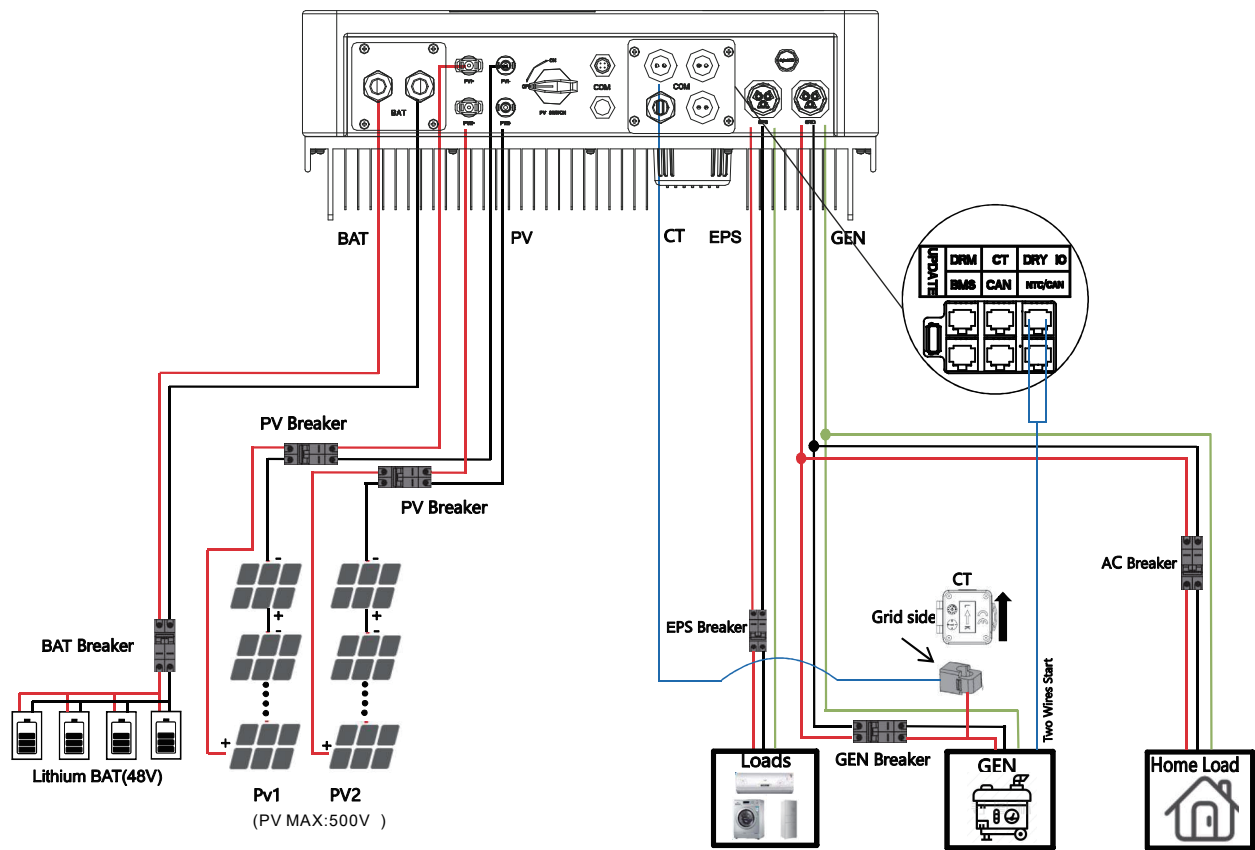

-
1. The generator function can only be used off-grid.

DRY_IO (RJ45 PIN) Definition

Reserved dry contact interface of the inverter




1	2	3	4	5	6	7	8
COM1	NO 1	NC 1	DI 1	DI 2	COM2	NO 2	NC 2

Sequence 1 and 2 serve as the dry contact of the generator, and the rest are reserved.

5 Setting

5.1 LED Panel

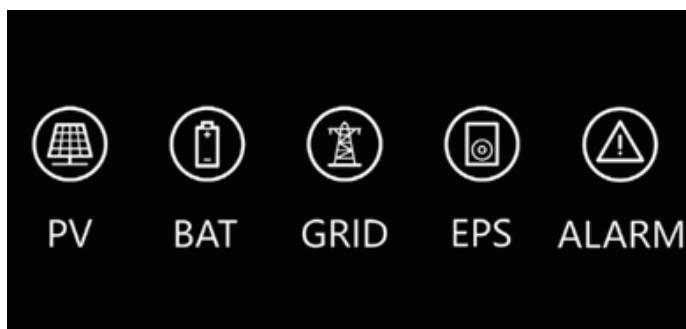


Instructions for LED Indicator

LED Indicator	Status	Description
PV	On	PV input is normal.
PV	OFF	PV is unavailable.
BAT	ON	Battery is active.
BAT	OFF	Battery is unavailable.
GRID	ON	GRID is available and normal.
GRID	OFF	GRID is unavailable.
EPS	ON	EPS power is available.
EPS	OFF	EPS power is unavailable.
ALARM	ON	Fault has occurred and inverter shuts down.
ALARM	OFF	No fault.


5.2 APP SETTING

5.2.1 APP quick installation



- Download and install the app "Solarman Smart" on your mobile phone.
- Connect the inverter to the collector first, and ensure that the COM and READY leds on the right of the data collector are blinking.

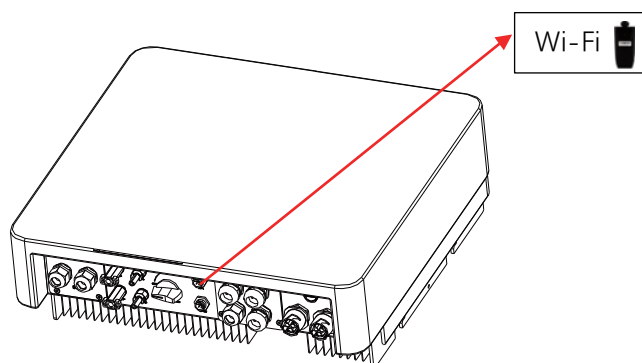

c. Open the APP and go to the main interface of the APP. Click "Local Mode", make sure your Bluetooth is enabled, scan the QR code on the collector or manually enter the serial number to connect to the collector.

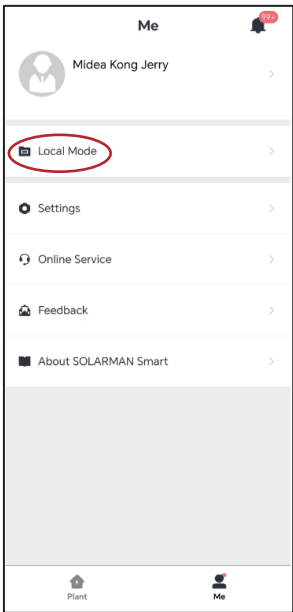

d. After the connection is successful, the COM indicator is steady on and the READY indicator is blinking.

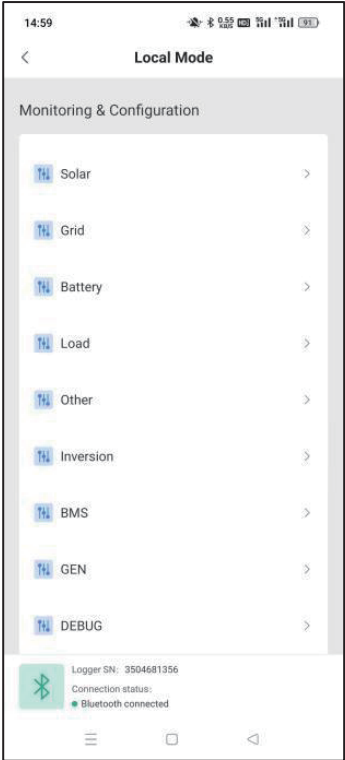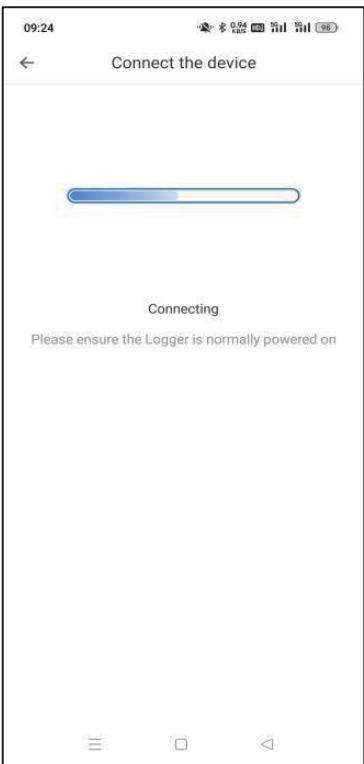

When this page is displayed, it means that the connection is successful and the equipment is in normal working condition, and the inverter parameters can be monitored through the software.

17:06	
Solar	
Solar	Grid Battery Load Oth
Dc voltage 1	1.4 V
Dc current 1	0.0 A
Dc voltage 2	0.5 V
Dc current 2	0.0 A
Dc voltage 3	0.0 V
Dc current 3	0.0 A
Dc voltage 4	0.0 V
Dc current 4	0.0 A
Dc power 1	0 W
Dc power 2	0 W
Dc power 3	0 W
Dc power 4	0 W
Dc day energy	0.000 kWh

5.2.2 Display interface

5.2.2.1 Solar page

Real-time parameters about the PV. This page shows the voltage and current, power, and energy parameters on the DC side.

- **Dc voltage** : PV input real-time voltage.
- **Dc current** : PV input real-time current.
- **Dc power** : PV input real-time power.
- **Dc day energy** : PV input power daily.
- **Dc total energy** : PV input power totally.

17:06	
Grid	
Solar	Grid Battery Load Oth
Power factor	1.000
Grid voltage A	0.0 V
Grid voltage B	1.1 V
Grid voltage C	0.0 V
Grid current A	0.0 A
Grid current B	0.0 A
Grid current C	0.0 A
Grid frequency	0.00 Hz
Output power	0 W
Buy Grid day energy	0.000 kWh
Buy Grid total energy	0.000 kWh
Sale Grid day energy	0.000 kWh
Sale Grid total energy	0.000 kWh

5.2.2.2 Grid page

Real-time parameters about the grid.

- **Power factor** : Power factor.
- **Grid voltage** : Grid-phase real-time voltage.
- **Grid current** : Grid-phase real-time current.
- **Grid frequency** : Real-time frequency.
- **Output power** : The power of output to Grid, “ + ” means sell power to Grid. “ - ” means buy power from Grid.
- **Buy Grid day energy** : Consumption of energy from Grid daily.
- **Buy Grid total energy** : Consumption of energy from Grid totally.
- **Sale Grid day energy** : Consumption of energy from PCS daily.
- **Sale Grid total energy** : Consumption of energy from PCS totally.

17:06		<div> <div></div> <div></div> <div></div> </div>	
<		Battery	
Solar	Grid	Battery	Load
Battery Type		Lithium Battery	
Battery Voltage		135.0 V	
Battery Current		10.0 A	
Battery Power		0 W	
Battery SOC		0.0 %	
Battery Temperature		0.0 °C	
Battery day discharge energy		0.000 kWh	
Battery total discharge energy		0.000 kWh	
Battery day charge energy		0.000 kWh	
Battery total charge energy		0.000 kWh	
Charging voltage obtained by BMS		0.0 V	
The charging current limit value obtained by the BMS		0.0 A	

5.2.2.3 Battery page

Real-time parameters about the battery.

- **Battery type** : (lead-acid, lithium battery, DC-SOURCE).
- **Battery Voltage** : Battery real-time voltage.
- **Battery Current** : Battery real-time current.
- **Battery Power** : Charge power. “ + ”means charge, “ - ” means discharge.
- **Battery SOC**: Percentage of battery capacity from the BMS.
- **Battery Temperature** : Battery temperature.
- **Battery day discharge energy** : Battery discharge energy daily.
- **Battery total discharge energy** : Battery discharge energy totally.
- **Battery day charge energy** : Battery charge energy daily.
- **Battery total charge energy** : Battery charge energy totally.
- **Charging voltage obtained by BMS** : Charge voltage from BMS.
- **The charging current limit value obtained by the BMS** : Charge current limit from BMS.

...

17:06		<div> <div></div> <div></div> <div></div> </div>	
<		Load	
Grid	Battery	Load	Other
Load voltage A		1.0 V	
Load current A		0.0 A	
Load voltage B		0.7 V	
Load current B		0.0 A	
Load voltage C		0.8 V	
Load current C		0.0 A	
Load Power		0 W	
Load day energy		0.000 kWh	
Load total energy		0.000 kWh	

5.2.2.4 Load page

Real-time parameters about the load.

Synonymy: BACK-UP/EPS/LOAD.

- **Load voltage** : Load-phase real-time voltage.
- **Load current** : Load-phase real-time current.
- **Load Power** : Output power of Load.
- **Load day energy** : Output power of Load daily.
- **Load total energy** : Output power of Load totally.

10:43	
Other	
Battery	Load
Other	Inversion
BMS	
Power Level	8.0 KW
Inverter State	STANDBY
Work mode	WEAK SFT
ARM Version	V1.03.21
DSP Version	V1.04.13
Custom Version	2
SN	F0122A015003
Inverter Temperature	26.0 °C
Environment Temperature	54.0 °C
Current Fault State	--
Current Fault State 2	--
Current Fault State 3	--
Positive BUS voltage	2.9 V
Negative BUS voltage	13.8 V
System Status Word	0x3001
INV Status	STANDBY
DCDC Status	STANDBY

5.2.2.5 Other page

Some information from inverter.


- **Power Level** : This interface show inverter model, for example 5.0kW,8.0kW.
- **Inverter State** : Displays the inverter status information (INIT, STANDBY, PV GRID,BAT GRID, HYBRID POW, AC BAT CHG, PV BAT CHG, BYP, FAULT).
- **Work mode** : Displays the working mode, including SELFCONSUME, PEAK SHIFT, BAT PRIORITY.
- **ARM Version** : Show Software version.
- **DSP Version** : Show Software version.
- **SN** : Show module SN.
- **Inverter Temperature** : Show inverter Temperature.
- **Environment Temperature** : Show environment Temperature.
- **Current Fault State** : Show current fault.
- **Positive BUS voltage** : Real-time voltage of bus capacitor of the inverter.
- **Negative BUS voltage** : Real-time voltage of bus capacitor of the inverter.
- **System Status Word** : Value of the actual system status.
- **INV States** : Displays the inverter status information,including: STANDBY, OFF GRID, GRID, OFF GRID PL, INV TO PFC.GRID: Grid connected state. OFF GRID PL: Working state of off-grid conversion to grid connection. INV TO PFC: Status of power by public grid turn into on grid working mode.
- **DCDC States** : Displays charging and discharging status information, including: STANDBY, CHARGE, DISCHARGE.

17:07	
Inversion	
load	Other
Inversion	Grid Settings
A-Phase Inverter Voltage	1.0 V
A-Phase Inverter Current	0.2 A
A-Phase Inverter Power	0 W
B-Phase Inverter Voltage	1.2 V
B-Phase Inverter Current	0.2 A
B-Phase Inverter Power	0 W
C-Phase Inverter Voltage	1.4 V
C-Phase Inverter Current	0.2 A
C-Phase Inverter Power	0 W

5.2.2.6 Inversion page

Internal parameters for on-site problem analysis, not for end users.

- **Phase Inverter Voltage** : INV -phase real-time voltage.
- **Phase Inverter Current** : INV -phase real-time current.
- **Phase Inverter Power** : INV -phase power.

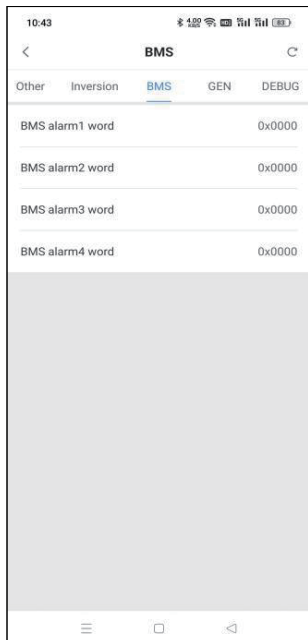

5.2.2.7 BMS page


This screen displays the alarm code obtained by the BMS when an inverter alarm is generated.



5.2.2.8 GEN page


This screen displays the input voltage frequency, voltage, current, and power parameters of the generator.

Note: 3-6kW single phase hybrid inverter didn't have these functions.

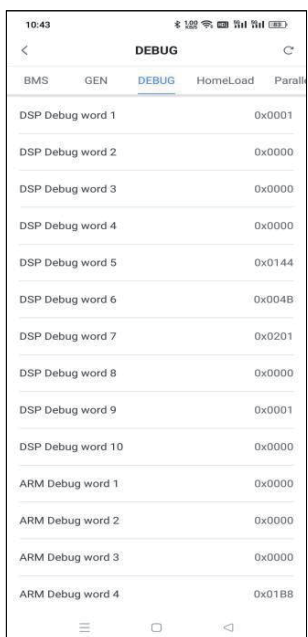

5.2.2.9 DEBUG page

Special debugging instruction code.

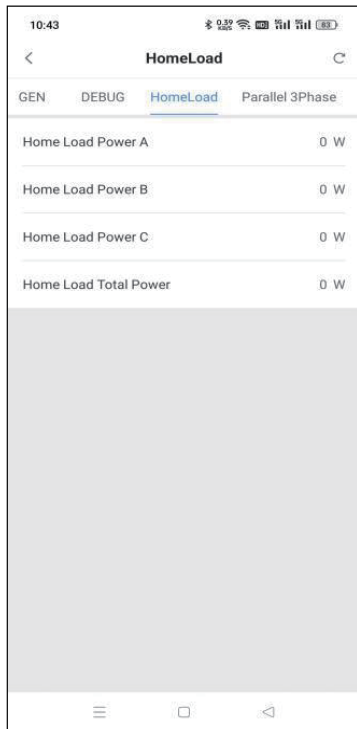

5.2.2.10 Home Load page

The home load parameter takes effect only when the home load is connected.



5.2.2.11 Parallel 3Phase page

Group three - phase parameter interface, available only when the three - phase is enabled. If you need to use, please consult local dealers.

Note: 3-6kW single phase hybrid inverter didn't have these functions.

5.2.3 APP Parameter setting page

5.2.3.1 Grid settings

You need to enter a password to access the grid Settings screen.



The default password is 00000.


- **Grid Std** : This interface is used to select Grid standard. (see 5.2.3.1.1)
- **Vac Min** : The input value of Grid low voltage. (This is valid only if the grid standard is "custom")
- **Vac Max** : The input value of Grid high voltage. (This is valid only if the grid standard is "custom")
- **Fac Min** : The input value of Grid low frequency. (This is valid only if the grid standard is "custom")
- **Fac Max** : The input value of Grid high frequency. (This is valid only if the grid standard is "custom")
- **Grid Power Scale** : The input value is power percent of grid.
- **Grid Set** : Select the grid parameters to which you are connected, Includes Single phase, Spilt phase, US 208V, JP 120V.

5.2.3.1.1 Grid standard

Grid Std	1:AU-Australia	240V/415V 50Hz
-> AU	2:AU-W-Western Australia	240V/415V 50Hz
AU-W	3:NZ-New Zealand	240V/415V 50Hz
NZ	4:UK-United Kingdom	230V 50Hz
UK	5:PK	230V 50Hz
VDE	6:KR-Korea	220V/380V 60Hz
KR	7:PHI-Philippines	110V/220V 60Hz
PHI	8:CN-China	220V/380V 50Hz
CN	9:US-CA-America	120V/240V208V/240V 60Hz
US-CA	10:THAIL	220/380V 50Hz
THAIL	11:ZA	230V 50Hz
SA	12:CUSTOM-User defined	-
CUSTOM	13:POL	230V/380V 50Hz
POL	14:EN50549	217V/220V/240V 380V/400V 50HZ/60Hz
EN50549	15:VDE4105-Germany	230V/380V 50Hz
VDE4105	16:Japan	110V/190V/60Hz
JPN	17:Italy	230V/380V/50Hz
ITA	18: Slovenia	230V/380V/50Hz
SLO	19: Czech Republic	230V/380V/50Hz
CZE	20: Sweden	230V/380V/50Hz
SWE	21: Hungary	230V/380V/50HZ
HU	22: Slovakia	230V/380V/50HZ
SK		


If none of the above options are available, please consult your dealer.

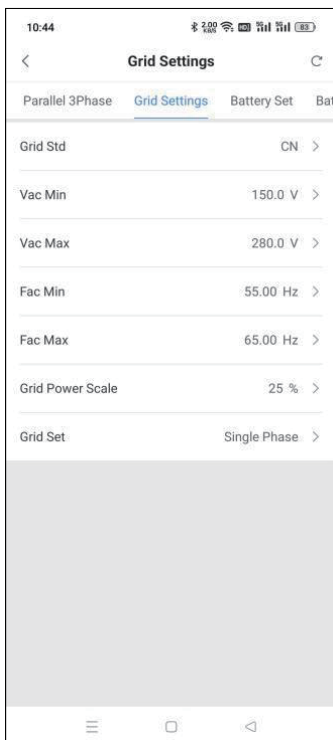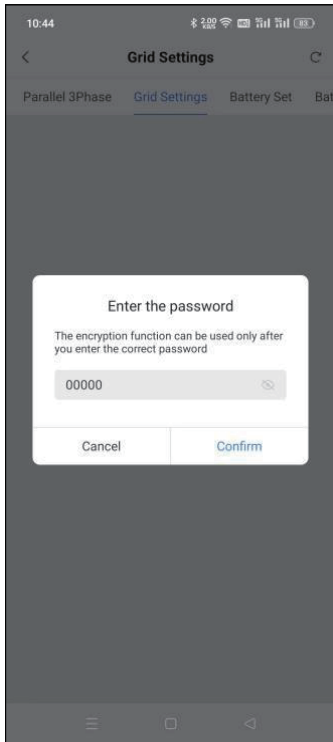

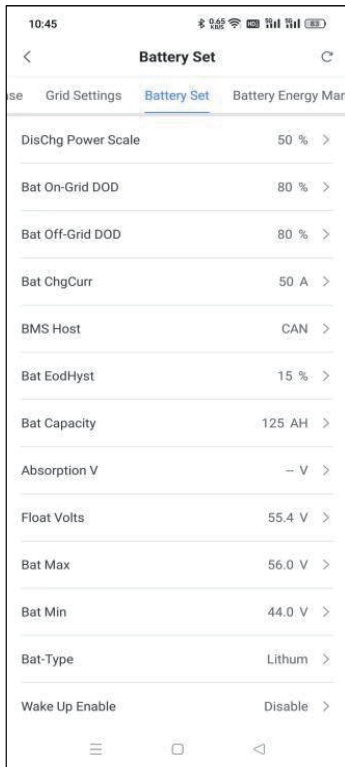

5.2.3.2 Battery set


- **DisChg Power Scale** : The input value is power percent of battery discharge. The default value is 100%.
- **Bat On-Grid DOD** : The depth of battery discharge when connected to the grid. When the battery discharge exceeds the DOD parameter, the inverter generates a low voltage or under voltage alarm, and the battery stops discharging.
- **Bat Off-Grid DOD** : The depth of battery discharge when off-grid. When the battery discharge exceeds the DOD parameter, the inverter generates a low voltage or under voltage alarm, and the battery stops discharging.
- **Bat ChgCurr** : The amount of current that can be set to charge the battery.
- **BMS Host** : This interface is used to select battery communication BMS type, including RS485, and CAN. The default option is CAN.
- **Bat EodHyst** : Return stroke error of discharge current, when the SOC is lower than the set point, it must go back to (SOC+Bat EodHyst), and the battery can discharge, otherwise, can not discharge. The default value is 20%.
- **Bat Capacity** : The battery capacity setting will affect the maximum charging current, for example, set 100Ah, the maximum charging current is $100A \times 0.2 = 20A$. (The input value ranges from 50 to 1000).
- **Absorption V** : The voltage at which a lead-acid battery is charged at constant voltage.
- **Float Volts** : Set the lead-acid battery charging voltage. (The input value ranges from 40 to 58).
- **Bat Max** : Only for lead acid Battery.
- **Bat Min** : Only for lead acid Battery.
- **Bat-Type** : Set the type of battery, according to the battery demand can be set DC source (for testing use only), lithium battery, lead-acid battery.
- **Wake Up Enable**: If you want to use this feature, consult your battery brand dealer. When the battery level is low and the battery relay has been disconnected, the inverter will send a command to the battery to forcibly suck the relay through the BMS, and the inverter will charge. After the battery wakes up successfully, please turn off the function, otherwise it will affect the normal operation of the machine.

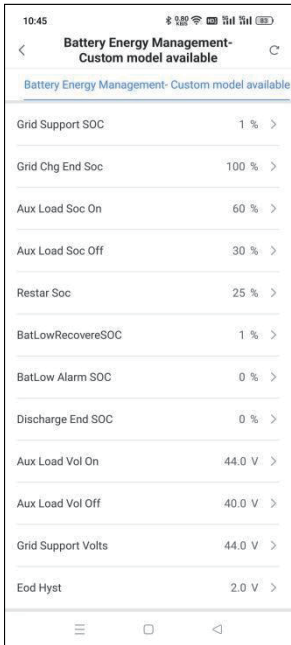

5.2.3.3 Battery Energy Management-Custom model available


This function only applies to some models, please consult the corresponding supplier whether it can be used.

Note: 3-6kW single phase hybrid inverter didn't have these functions.

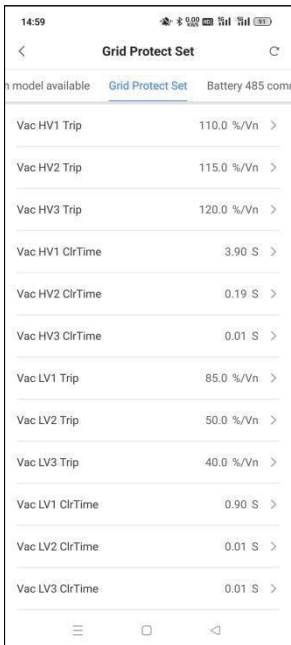

5.2.3.4 Grid Protect Set


Customers do not need to change the Grid protection Settings. If any modification is required, consult the local supplier.

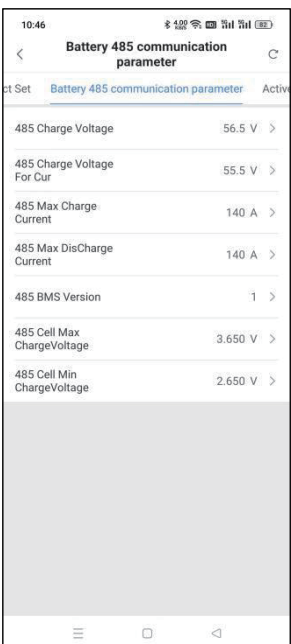

5.2.3.5 Battery 485 communication parameter

- **485 Current Charge voltage** : Set the 485 current charging voltage.
- **485 Charge voltage for cur** : Set the 485 charge current limiting start voltage.
- **485 Max. Charge current** : Set the maximum charge current of the 485.
- **485 Max. Discharge current** : Set 485 Max. Discharge current.
- **485 BMS Version** : Set the maximum charge current of the 485.
- **485 Cell Max Charge Voltage** : Set the maximum voltage of the 485 unit.
- **485 Cell Min Charge Voltage** : Set the minimum voltage of the 485 unit.

Note: 3-6kW single phase hybrid inverter didn't have these functions.

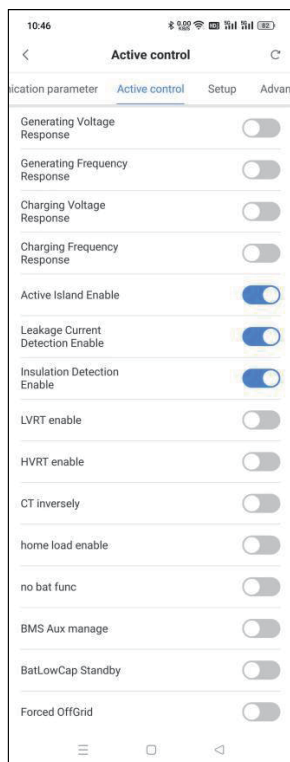


5.2.3.6 Active control

- **Generation voltage response** : When the grid voltage is abnormal, the active power is limited, and the function is enabled when required by the national grid standard.
- **Generation frequency response** : When the power grid frequency is abnormal, the active power will be limited, and the function will be enabled if required by the national power grid standard.
- **Charge voltage response** : When the grid voltage is abnormal, the charging power will be limited, and the function will be enabled if required by the national grid standards.
- **Charge frequency response** : When the power grid frequency is abnormal, the charging power will be limited, and the function will be enabled if required by the national power grid standard.


- **Active Island Enable** : When the grid goes down, inverter will detect the loss of power and disconnect from the grid within milliseconds. It prevents your solar panels from feeding electricity into a downed power line. (The default option is enable).
- **Leakage Current Detection Enable** : Leak current detect (The default option is enable).
- **Insulation detection Enable** : When the insulation detection function is enabled in the grid-connected state, the insulation detection is performed once a day when the photovoltaic energy comes in, and the inverter switches to the By-pass band load. If the inverter is off-grid, the output will be disconnected during insulation detect and the load will stop working. (The default option is enable).
- **LVRT enable** : means low voltage trip protection, and undervoltage protection can be realized after opening.
- **HVRT enable** : means high voltage trip protection. and overvoltage protection can be realized after opening.
- **CT inversely** : Enable/disable CT inversely. Reverse the current detected by the CT of the power grid. This function is applicable to reverse the CT detection of the power grid.
- **No Bat func** : Enable/disable the battery-free system.
- **BMS Aux MANAGE** : When the BMS of the battery does not have a disable charge or discharge function, the inverter will automatically reduce the power to avoid overcharging or over discharging the battery. The default option is disabled.
- **Bat Low Cap Standby** : When there is no photovoltaic power supply at night, and the battery.
- **Forced Off Grid** : The inverter is forced to disconnect from the power grid. The default option is disabled.

Note: 3-6kW single phase hybrid inverter only have BMS Aux MANAGE and Bat Low Cap Standby .

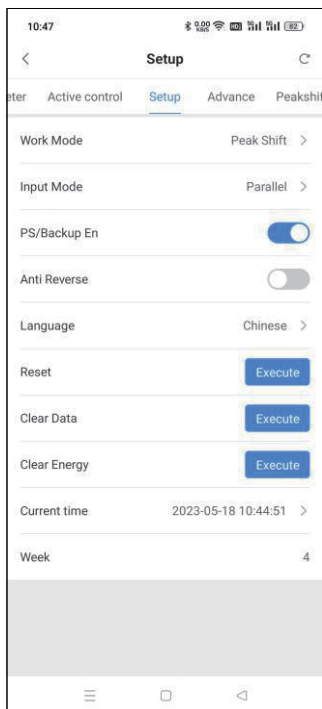

5.2.3.7 Setup


- **Work Mode** : This interface is used to select the working mode, includes SELFCONSUME, PEAK SHIFT, BAT PRIORITY. The default setting is SELFCONSUME.
- **Input Mode** : Setup of PV Input mode (**INDEPENDENT** : The default Settings, **PARALLEL** : This feature is for test use only, not customer use, **CV** : This feature is for test use only, not customer use) .The default setting is Independent.
- **PS/Backup En** : When the Grid and PV are powered off, Enable the battery to supply power to the load, default option is enable.
- **Anti- Reverse** : Whether Inverter isn't allowed to generate electricity to the Grid, The default option is disable, Enable means that it isn't allowed to generate electricity to the Grid.
- **Language** : Set the system language, including Chinese and English.
- **Reset** : Execute the command to perform a factory reset.
- **Clear Data** : Execute a command to clear data.
- **Clear Energy** : Execute the command to clear statistics.
- **Current time** : Current time setting for the PCS.
- **Week** : Day of week.

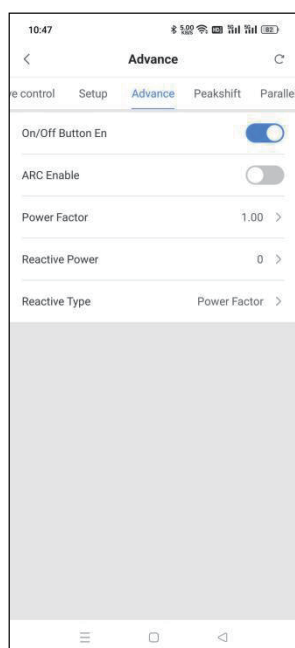

5.2.3.8 Advance

- **On/Off Button En** : After this button is enabled, you need to manually press the switch button to start the inverter. Otherwise, the inverter will be in standby state. After disabling the button, the inverter will start immediately upon power-on.
- **ARC Enable** : After this function is enabled, DC arc pulling phenomenon can be detected, and the inverter can be shut down in time when arc pulling phenomenon occurs again.
- **Power Factor** : The input value should range between L0.80 and L0.99 or C0.8 and C1.00.
- **Reactive Power** : Reactive power control. The input value should range between -60% and +60%, which varies with the standard.
- **Reactive Type** : Including: Power Factor, React Power Qu Wave Qp Wave. (For specific country if required by the local grid).

Note: 3-6kW single phase hybrid inverter didn't have these functions.


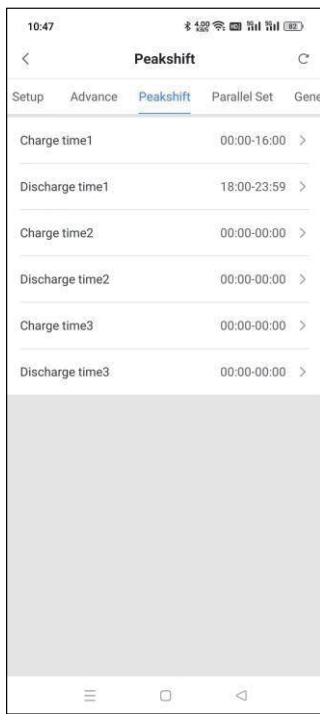


5.2.3.9 Peakshift

This time range is enabled only when the working mode is Peak shift.

- **Peak shift** : This function allows three charge and discharge cycles to be set to ensure that the inverter's time is local when the time is set. This parameter is set to one day, if the specified time conflict, the first time is executed as the master time; If the three time ranges do not conflict, the three time ranges are executed sequentially.

If you want to set a continuous charging time from the first night to the next morning. For example, you want charge battery from first day 21:00pm to next day 5:00am, divide this time period into two time periods (21:00~23:59, 00:00~05:00), and select two charging time periods from Time1, Time2 and Time3 and set them

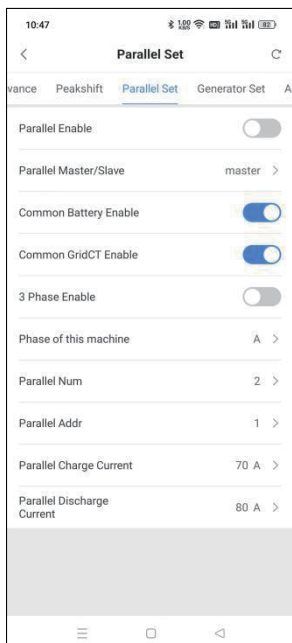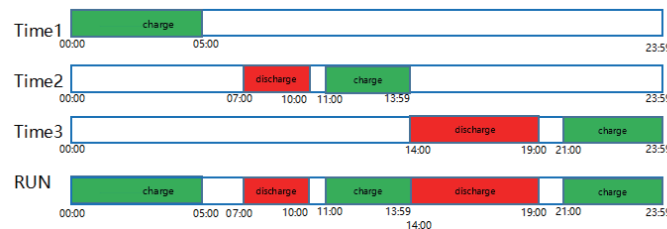

5.2.3.10 Parallel Set

- **Parallel Enable** : Enable/Disable the parallel function.
- **Parallel Master/Slave** : In a parallel system, the master unit broadcasts the bms and other information to the slavers. Make sure only one unit is configured as master.
- **Common Battery Enable** : Common battery or independent battery.
- **Common GridCT Enable** : If using Common CT connection Method, this feature needs to be enabled. To enable this feature, you need to change the CT model, please contact your dealer.
- **3 Phase Enable** : Enable the three-phase function.
- **Phase of this machine** : Local phase of unit for three phase installation (reserved function) .

- **Parallel Num** : Set the number of parallel machines, and select the number of units to include hosts.
- **Parallel address** : According to the number of parallel machines with numerical coding, each machine address can not be repeated.
- **Parallel charging current** : The sum of the charging current of the master and slave, and the charging current of each machine = parallel charging current / number of parallel units.
- **Parallel discharge current** : The sum of the discharge current of the master and slave, the discharge current of each machine = parallel discharge current / number of parallel units.




5.2.3.11 Generator Set

This page is the generator settings, and you can modify the parameters of this section through this page

- **GEN Enable** : Enable control of the Generator function.
- **GEN Charge Enable** : Generator Charge Enable control.
- **GEN Auto Start** : If the user wants the Generator to be automatically controlled to start and stop through the dry contact, Enable it.
- **GEN Manual ON** : If the user wants the Generator to be controlled manually, Enable it. Manual En should be opposed to Automatic control En.
- **GEN Manual CMD** : The on/off command in manual control mode.
- **GEN Connect to Grid Input** : Connect the Generator to the grid input port.
- **GEN Start SOC** : When the SOC of battery is lower than the setpoint, the Generator dry contact is enabled and Generator Manual operation is disabled, the connected Generator will be started.
- **GEN Stop SOC** : When the SOC of battery is higher than the setpoint, the Generator dry contact is enabled and Generator Manual operation is disabled, the connected Generator will be stopped.
- **GEN Charges the Battery current** : It indicates the maximum current that the inverter charges the battery from Generator.
- **GEN Maximum Operating Time** : It indicates the longest time Generator can run in one day, when time is up, the Generator will be turned off. The value 240 means 24hours in which state the Generator will not be shut down all the time. The unit is 0.1 hour.
- **GEN Cooling Time** : It indicates the waiting time of the Generator to restart after it has reached the running time. The unit is 0.1 hour.
- **GEN Power** : Rated power of Generator.
- **GEN Stop2 SOC (Day Time)** : Reserve function.
- **GEN Voltage Low/High** : Generator low voltage, high voltage alarm setting value.
- **GEN Start /Stop Volt** : Battery voltage Sets the value for turning on and off the generator.

Note: 3-6kW single phase hybrid inverter didn't have these functions: GEN Manual CMD, GEN Connect to Grid Input, GEN Stop2 SOC (Day Time) , GEN Voltage Low/High, GEN Start /Stop Volt.

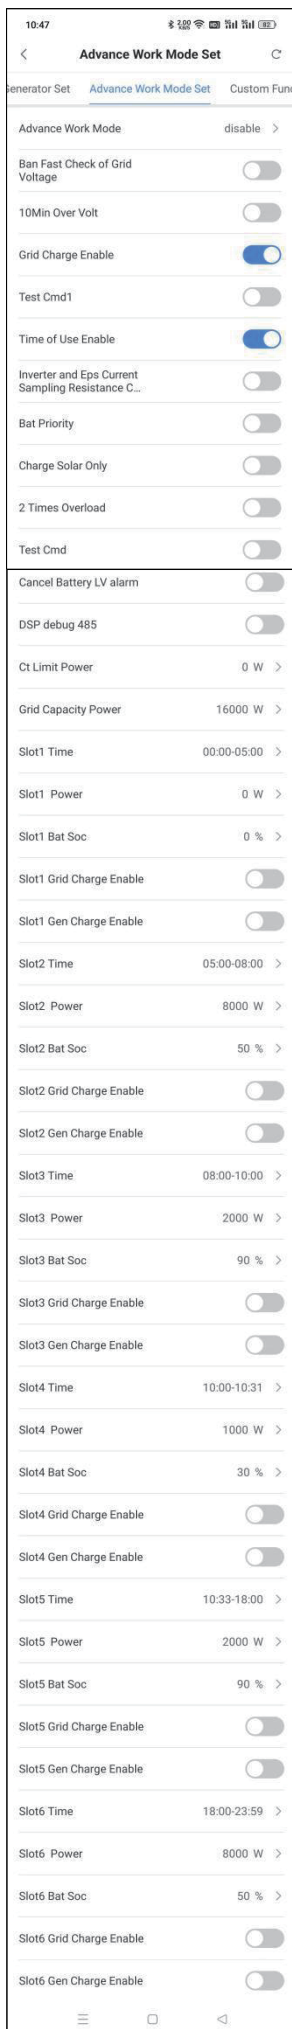

5.2.3.12 Advance Work Mode Set

- **Advanced mode work** : There are three advanced modes available: Sell First, limit grid consumption, zero export. The Basic mode feature is automatically disabled when you enable Advanced mode.

①**Sell First** : First consider selling electricity to the grid. In this mode the anti-reflux setting is automatically disabled. The users can use this mode to sell back surplus solar power to grid. If time of use is enabled, the battery power can also be sold to grid (Excess PV and battery power can be sold to the grid).

②**limit grid consumption** : In this mode, the ct limiters are used to sense the grid power flow direction. The hybrid inverter can be choosed to sell power or not sell power to grid. There is a CT Limit Power parameter available in this mode. When the battery is needed to discharge to reduced the load consumption, the grid will cover the parameter set part consumption firstly and the battery discharges energy to makes up the rest part. Other conditions are similar to SELF CONSUME working mode (Excess PV power can be sold to the grid through CT Limit)..

③**zero export** : In this mode, the ct limiters should be installed in the input of the inverter's grid port. The hybrid inverter will not sell power to grid. The user can use Zero export power parameter to ensure the inverter won't feed back power to grid (Neither PV nor battery excess power is sold to the grid).

- **Grid Charge Enable** : It is a high-level control attribute of grid charge enable. If time of use function is disabled, this attribute is used to judge whether or not to charge the battery by grid. If time of use function is enabled, the battery can be charged by grid only when the time slot grid charge attribute is enabled.

- **Bat priority** : Battery priority enable switch.

- **Charge Solar Only** : If user don't want to use grid to charge the battery in any time, please enable this attribute. The photovoltaic energy will be used first for the load, and then the excess energy will be used to charge the battery. If the photovoltaic energy is insufficient, the battery will power the load.

- **CT limiting power** : CT limiting power can be set.

- **Grid Capacity Power** : grid capacity can be set.

- **Slot1 Time** : Time range setting.

- **Slot1 Power** : The charging and discharging power of the battery.

- **Slot1 Bat SOC** : Battery SOC Settings within a time range. When the actual SOC of the battery is greater than the set value, the battery is in discharge state. When the actual SOC of the battery is less than the set value, the battery is charged.

- **Slot1 Grid Charge Enable** : Grid charging is allowed in Slot1. Available only when Grid charge enable is on.

5.2.3.12 Advance Work Mode Set

- **Slot1 Gen Charge Enable** : Gen charging is allowed in Slot1.
There are 6 slots which can be programmed. You can set the advanced mode first, and then set the battery to charge or discharge in the set time, choose grid charge or generator charge.
The following functions do not need to be configured.
- **Ban Fast Check of Grid Voltage** : Enable/disable fast abnormal detection of power grid voltage.
- **10Min Over Volt / Test Cmd1 / Inverter and eps current sampling resistance change / 2 Times Overload / Test CMD / : /.**
- **DSP debug 485** : Enable or disable DSP debug 485.
- **Cancel Battery LV alarm** : When the battery voltage reaches the battery low value, the system forcibly enables the battery voltage no-alarm function.

5.2.3.13 Custom Function


This interface is customized. If you need to customize the interface, contact your local supplier.

5.2.3.14 AC Couple

This interface is customized. If you need to customize the interface, contact your local supplier.

5.2.3.15 Debugging commands

This interface is used to debug serial port communication, Special for testing.

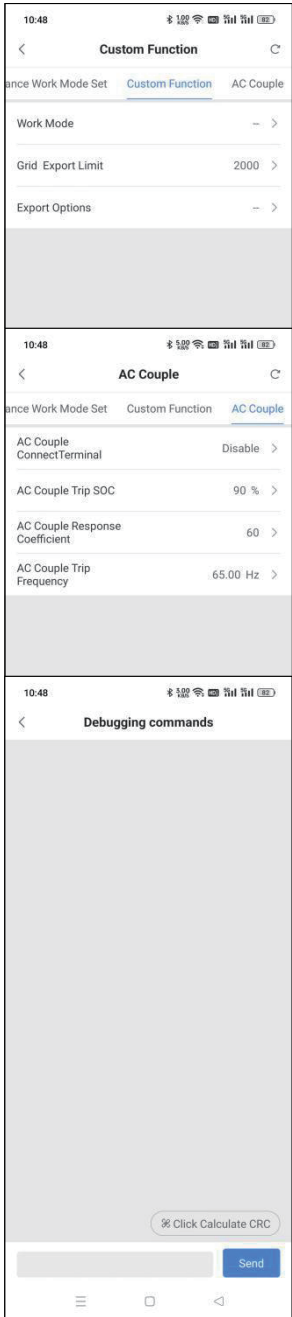

6 Fault diagnosis and solutions

The following table lists some basic problems that may occur in practice and the corresponding basic solutions. When you encounter the following problems, please refer to the following solutions.



- If the problem is still not solved, please contact your local distributor.
- If an error occurs that is not listed in the table, please contact customer service.

Codes:	00
---------------	----

Content:	DischgOverCur
-----------------	---------------

Explanation:

Battery discharge over current. When the battery is loaded, the load is too large.

Solutions:

- Nothing need to do, Wait one minute for the inverter to restart.
- Check whether the load is in compliance with the specification.
- Disconnect all power and shut down all inverters; disconnect the load and restart the inverter with power.

Codes:	01
---------------	----

Content:	Over Load
-----------------	-----------

Explanation:

The load power is greater than other power(PV,BAT).

Solutions:

- Check whether the load is in compliance with the maximum power of the inverter.
- Disconnect all power and turn off all inverters; disconnect the load, power up and restart the inverter, and if the fault has been cleared, check the load again for a short circuit.
- If the error/warning remains, please contact customer service.

Codes:	02
---------------	----

Content:	BatDisconnect
-----------------	---------------

Explanation:

Battery Disconnect. (Battery voltage not identified)

Solutions:

- Check whether the battery is connected.
- Check if battery wiring port is open circuited.
- If the error/warning remains, please contact customer service.

Codes:	03	Solutions:
Content:	Bat Under Vol	<ul style="list-style-type: none"> • Checking system settings, re-power and restart. • Check if the grid power down. If so, waiting for the grid power up, the inverter will automatically charge. • If the error/warning remains, please contact customer service.
Explanation:		
Battery voltage lower than normal range.		

Codes:	04	Solutions:
Content:	Bat Low capacity	<ul style="list-style-type: none"> • Low battery setting capacity (SOC<100%-DOD)
Explanation:		
Bat Low capacity		

Codes:	05	Solutions:
Content:	Bat Over Vol	<ul style="list-style-type: none"> • Checking system settings, re-power and restart. • If the error/warning remains, please contact customer service.
Explanation:		
The battery voltage is over than the Inverter maximum voltage.		

Codes:	06 / 07	Solutions:
Content:	Gird low vol / over vol	<ul style="list-style-type: none"> • Check if the grid is abnormal. • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation:		
Grid voltage is abnormal.		

Codes:	08 / 09	Solutions:
Content:	Gird lowFreq / overFreq	<ul style="list-style-type: none"> • Check if the grid is abnormal. • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation:		
Grid Frequency is abnormal.		

Codes:	10
--------	----

Content:	Gfci over
----------	-----------

Explanation:

Inverter GFCI exceeds standard.

Solutions:

- Check PV string for direct or indirect grounding phenomenon.
 - Check peripherals of inverter for current leakage.
 - If the error/warning remains, please contact customer service.
-

Codes:	13
--------	----

Content:	Bus under vol
----------	---------------

Explanation:

BUS voltage is lower than normal.

Solutions:

- Check the input mode setting is correct.
 - Restart the inverter and wait until it functions normally.
 - If the error/warning remains, please contact customer service.
-

Codes:	14
--------	----

Content:	Bus over vol
----------	--------------

Explanation:

BUS voltage is over maximum value.

Solutions:

- Check the input mode setting is correct.
 - Restart the inverter and wait until it functions normally.
 - If the error/warning remains, please contact customer service.
-

Codes:	15
--------	----

Content:	Inv over cur
----------	--------------

Explanation:

The inverter current exceeds the normal value.

Solutions:

- Restart the inverter and wait until it functions normally.
-

Codes:	16
--------	----

Content:	Chg over cur
----------	--------------

Explanation:

Battery charge current over than the Inverter maximum voltage.

Solutions:

- Restart the inverter and wait until it functions normally.
-

Codes:	18 / 19
---------------	---------

Content:	Inv under vol / over vol
-----------------	--------------------------

Explanation:

INV voltage is abnormal.

Solutions:

- Check if the INV voltage is abnormal.
 - Restart the inverter and wait until it functions normally.
 - If the error/warning remains, please contact customer service.
-

Codes:	20
---------------	----

Content:	Inv Freq Abnor
-----------------	----------------

Explanation:

INV frequency is abnormal.

Solutions:

- Check if the INV frequency is abnormal.
 - Restart the inverter and wait until it functions normally.
 - If the error/warning remains, please contact customer service.
-

Codes:	21
---------------	----

Content:	Igbt temp high
-----------------	----------------

Explanation:

The inverter temperature is higher than the allowed value.

Solutions:

- Disconnect all power from the inverter, wait one hour, and then turn on the power to the inverter.
-

Codes:	23
---------------	----

Content:	Bat over temp
-----------------	---------------

Explanation:

Battery temperature is higher than the allowed value.

Solutions:

- Disconnect the battery and reconnect it after an hour.
-

Codes:	24
---------------	----

Content:	Bat UnderTemp
-----------------	---------------

Explanation:

Battery temperature is lower than the allowed value.

Solutions:

- Check the ambient temperature near the battery to confirm it meets the specifications.
-

Codes:	27	Solutions:
Content:	BMS comm.fail	<ul style="list-style-type: none"> • Check the cable, RJ45 header, line sequence. • Checking the Battery switch.
Explanation: Communication between lithium battery and inverter is abnormal.		
Codes:	28 / 36	Solutions:
Content:	Fan fail	<ul style="list-style-type: none"> • Check whether the Inverter temperature is abnormal. • Check whether the fan runs properly.(If you can see it)
Explanation: Fan fail		
Codes:	30	Solutions:
Content:	Grid Phase error	<ul style="list-style-type: none"> • Check power grid wiring.
Explanation: The power grid phase sequence is incorrectly connected.		
Codes:	31	Solutions:
Content:	Arc Fault	<ul style="list-style-type: none"> • Check Photovoltaic panels, PV wire. • If the error/warning remains, please contact customer service.
Explanation: PV Arc Fault		
Codes:	32 / 33	Solutions:
Content:	Bus soft fail / Inv soft fail	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		
Codes:	34 / 35	Solutions:
Content:	Bus short / Inv short	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		

Codes:	37	Solutions:
Content:	PV iso low	<ul style="list-style-type: none"> • Check if the PE line is connected to the inverter and is connected to the ground. • If the error/warning remains, please contact customer service.
Explanation: PV Low insulation impedance.		
Codes:	38	Solutions:
Content:	Bus Relay Fault	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		
Codes:	39	Solutions:
Content:	Grid Relay Fault	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		
Codes:	40	Solutions:
Content:	EPS rly fault	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		
Codes:	41	Solutions:
Content:	Gfci fault	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		

Codes:	44	Solutions:
Content:	Selftest fail	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: PV Low insulation impedance.		

Codes:	45	Solutions:
Content:	System fault	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		

Codes:	46	Solutions:
Content:	Current DCover	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		

Codes:	47	Solutions:
Content:	Voltage DCover	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • If the error/warning remains, please contact customer service.
Explanation: The inverter may be damaged.		



The copy right of this manual belongs to GD Midea Heating & Ventilating Equipment Co., Ltd. Any corporation or individual should not plagiarize, copy, reduction, or distribution this manual in any form or by any means. All rights reserved.

The information in this document (including software, etc.) is subject to change without notice. Every effort has been made to ensure the accuracy of the contents during the preparation of this document, but all statements, information and suggestions in this document do not constitute any express or implied warranty in any form.

GD Midea Heating & Ventilating Equipment Co., Ltd. reserves the right of final interpretation.